

3.5"-SBC-APL V2.0

Doc. User Guide, Rev. 2.7

Doc. ID: [To be Determined]

This page has been intentionally left blank

 3.5"-SBC-APL V2.0 - USER GUIDE

Disclaimer

Kontron would like to point out that the information contained in this user guide may be subject to alteration, particularly as a result of the constant upgrading of Kontron products. This document does not entail any guarantee on the part of Kontron with respect to technical processes described in the user guide or any product characteristics set out in the user guide. Kontron assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright or mask work rights to these products and makes no representations or warranties that these products are free from patent, copyright or mask work right infringement unless otherwise specified. Applications that are described in this user guide are for illustration purposes only. Kontron makes no representation or warranty that such application will be suitable for the specified use without further testing or modification. Kontron expressly informs the user that this user guide only contains a general description of processes and instructions which may not be applicable in every individual case. In cases of doubt, please contact Kontron.

This user guide is protected by copyright. All rights are reserved by Kontron. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the express written permission of Kontron. Kontron points out that the information contained in this user guide is constantly being updated in line with the technical alterations and improvements made by Kontron to the products and thus this user guide only reflects the technical status of the products by Kontron at the time of publishing.

Brand and product names are trademarks or registered trademarks of their respective owners.

©2023 by Kontron Europe GmbH

Kontron Europe GmbH

Gutenbergstraße 2
85737 Ismaning
Germany
www.kontron.com

High Risk Applications Hazard Notice

THIS DEVICE AND ASSOCIATED SOFTWARE ARE NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE OR RESALE FOR THE OPERATION OF NUCLEAR FACILITIES, THE NAVIGATION, CONTROL OR COMMUNICATION SYSTEMS FOR AIRCRAFT OR OTHER TRANSPORTATION, AIR TRAFFIC CONTROL, LIFE SUPPORT OR LIFE SUSTAINING APPLICATIONS, WEAPONS SYSTEMS, OR ANY OTHER APPLICATION IN A HAZARDOUS ENVIRONMENT, OR REQUIRING FAIL-SAFE PERFORMANCE, OR IN WHICH THE FAILURE OF PRODUCTS COULD LEAD DIRECTLY TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE (COLLECTIVELY, "HIGH RISK APPLICATIONS").

You understand and agree that your use of Kontron devices as a component in High Risk Applications is entirely at your risk. To minimize the risks associated with your products and applications, you should provide adequate design and operating safeguards. You are solely responsible for compliance with all legal, regulatory, safety, and security related requirements concerning your products. You are responsible to ensure that your systems (and any Kontron hardware or software components incorporated in your systems) meet all applicable requirements. Unless otherwise stated in the product documentation, the Kontron device is not provided with error-tolerance capabilities and cannot therefore be deemed as being engineered, manufactured or setup to be compliant for implementation or for resale as device in High Risk Applications. All application and safety related information in this document (including application descriptions, suggested safety measures, suggested Kontron products, and other materials) is provided for reference only.

Revision History

Revision	Brief Description of Changes	Date of Issue
1.0	Initial Issue	2017-Dec-19
1.1	Update audio interface in Table 1 and Sec. 7.7 CN11 description	2019-May-13
1.2	Add Celeron® J CPU, update USB 2.0 & M.2 Key Spec & CE / FCC Class	2020-Jun-02
1.3	Update non-ECC support	2020-Jun-22
2.0	Rename as 3.5"-SBC-APL V2.0	2020-Jul-02
2.1	Typo correction	2020-Aug-20
2.2	Audio codec chip replacement	2021-Mar-30
2.3	Add information about HDMI level shifter	2021-Jun-25
2.4	Add Jumper JP12	2022-Mar-21
2.5	Modify USB 3.0 to USB 3.2 Gen 1 per new naming	2022-Jul-29
2.6	Update BIOS Boot menu	2023-Aug-04
2.7	Add a configuration guide about AT / ATX mode & BIOS Restore Power	2023-Nov-09

Terms and Conditions

Kontron warrants products in accordance with defined regional warranty periods. For more information about warranty compliance and conformity, and the warranty period in your region, visit <https://www.kontron.com/terms-and-conditions>.

Kontron sells products worldwide and declares regional General Terms & Conditions of Sale, and Purchase Order Terms & Conditions. Visit <https://www.kontron.com/terms-and-conditions>.

For contact information, refer to the corporate offices contact information on the last page of this user guide or visit our website [CONTACT US](#).

Customer Support

Find Kontron contacts by visiting: <https://www.kontron.com/support>.

Customer Service

As a trusted technology innovator and global solutions provider, Kontron extends its embedded market strengths into a services portfolio allowing companies to break the barriers of traditional product lifecycles. Proven product expertise coupled with collaborative and highly-experienced support enables Kontron to provide exceptional peace of mind to build and maintain successful products.

For more details on Kontron's service offerings such as: enhanced repair services, extended warranty, Kontron training academy, and more visit <https://www.kontron.com/support-and-services/services>.

Customer Comments

If you have any difficulties using this user guide, discover an error, or just want to provide some feedback, contact [Kontron support](#). Detail any errors you find. We will correct the errors or problems as soon as possible and post the revised user guide on our website.

Symbols

The following symbols may be used in this user guide

⚠ DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE

NOTICE indicates a property damage message.

⚠ CAUTION

CAUTION indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.



Electric Shock!

This symbol and title warn of hazards due to electrical shocks (> 60 V) when touching products or parts of products. Failure to observe the precautions indicated and/or prescribed by the law may endanger your life/health and/or result in damage to your material.



ESD Sensitive Device!

This symbol and title inform that the electronic boards and their components are sensitive to static electricity. Care must therefore be taken during all handling operations and inspections of this product in order to ensure product integrity at all times.



HOT Surface!

Do NOT touch! Allow to cool before servicing.



Laser!

This symbol inform of the risk of exposure to laser beam and light emitting devices (LEDs) from an electrical device. Eye protection per manufacturer notice shall review before servicing.



This symbol indicates general information about the product and the user guide.

This symbol also indicates detail information about the specific product configuration.



This symbol precedes helpful hints and tips for daily use.

For Your Safety

Your new Kontron product was developed and tested carefully to provide all features necessary to ensure its compliance with electrical safety requirements. It was also designed for a long fault-free life. However, the life expectancy of your product can be drastically reduced by improper treatment during unpacking and installation. Therefore, in the interest of your own safety and of the correct operation of your new Kontron product, you are requested to conform with the following guidelines.

High Voltage Safety Instructions

As a precaution and in case of danger, the power connector must be easily accessible. The power connector is the product's main disconnect device.

⚠ CAUTION

Warning

All operations on this product must be carried out by sufficiently skilled personnel only.

⚠ CAUTION



Electric Shock!

Before installing a non hot-swappable Kontron product into a system always ensure that your mains power is switched off. This also applies to the installation of piggybacks. Serious electrical shock hazards can exist during all installation, repair, and maintenance operations on this product. Therefore, always unplug the power cable and any other cables which provide external voltages before performing any work on this product.

Earth ground connection to vehicle's chassis or a central grounding point shall remain connected. The earth ground cable shall be the last cable to be disconnected or the first cable to be connected when performing installation or removal procedures on this product.

Special Handling and Unpacking Instruction

NOTICE



ESD Sensitive Device!

Electronic boards and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times.

Do not handle this product out of its protective enclosure while it is not used for operational purposes unless it is otherwise protected.

Whenever possible, unpack or pack this product only at EOS/ESD safe work stations. Where a safe work station is not guaranteed, it is important for the user to be electrically discharged before touching the product with his/her hands or tools. This is most easily done by touching a metal part of your system housing.

It is particularly important to observe standard anti-static precautions when changing piggybacks, ROM devices, jumper settings etc. If the product contains batteries for RTC or memory backup, ensure that the product is not placed on conductive surfaces, including anti-static plastics or sponges. They can cause short circuits and damage the batteries or conductive circuits on the product.

Lithium Battery Precautions

If your product is equipped with a lithium battery, take the following precautions when replacing the battery.

CAUTION

Danger of explosion if the battery is replaced incorrectly.

- ▶ Replace only with same or equivalent battery type recommended by the manufacturer.
- ▶ Dispose of used batteries according to the manufacturer's instructions.

General Instructions on Usage

In order to maintain Kontron's product warranty, this product must not be altered or modified in any way. Changes or modifications to the product, that are not explicitly approved by Kontron and described in this user guide or received from Kontron Support as a special handling instruction, will void your warranty.

This product should only be installed in or connected to systems that fulfill all necessary technical and specific environmental requirements. This also applies to the operational temperature range of the specific board version that must not be exceeded. If batteries are present, their temperature restrictions must be taken into account.

In performing all necessary installation and application operations, only follow the instructions supplied by the present user guide.

Keep all the original packaging material for future storage or warranty shipments. If it is necessary to store or ship the product then re-pack it in the same manner as it was delivered.

Special care is necessary when handling or unpacking the product. See Special Handling and Unpacking Instruction.

Quality and Environmental Management

Kontron aims to deliver reliable high-end products designed and built for quality, and aims to complying with environmental laws, regulations, and other environmentally oriented requirements. For more information regarding Kontron's quality and environmental responsibilities, visit <https://www.kontron.com/about-kontron/corporate-responsibility/quality-management>.

Disposal and Recycling

Kontron's products are manufactured to satisfy environmental protection requirements where possible. Many of the components used are capable of being recycled. Final disposal of this product after its service life must be accomplished in accordance with applicable country, state, or local laws or regulations.

WEEE Compliance

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to:

- ▶ Reduce waste arising from electrical and electronic equipment (EEE)
- ▶ Make producers of EEE responsible for the environmental impact of their products, especially when the product become waste
- ▶ Encourage separate collection and subsequent treatment, reuse, recovery, recycling and sound environmental disposal of EEE
- ▶ Improve the environmental performance of all those involved during the lifecycle of EEE



Environmental protection is a high priority with Kontron.

Kontron follows the WEEE directive

You are encouraged to return our products for proper disposal.

Table of Contents

Symbols.....	7
For Your Safety	8
High Voltage Safety Instructions	8
Special Handling and Unpacking Instruction	8
Lithium Battery Precautions.....	9
General Instructions on Usage	9
Quality and Environmental Management	9
Disposal and Recycling.....	9
WEEE Compliance.....	9
Table of Contents	10
List of Tables	11
List of Figures	12
1/ Introduction	14
2/ Installation Procedures	15
2.1. Installing the Board	15
2.2. Chassis Safety Standards.....	16
2.3. Lithium Battery Replacement	16
3/ System Specifications	18
3.1. System Block Diagram.....	18
3.2. Component Main Data	19
3.3. Environmental Conditions	20
3.4. Standards and Certifications.....	20
3.5. Processor Support.....	21
3.6. System Memory Support.....	21
3.6.1. Memory Operating Frequencies	21
3.7. On-board Graphics Subsystem.....	22
3.8. Power Supply.....	22
4/ Connector Locations	24
4.1. Top Side.....	24
4.2. Rear Side	26
4.3. Connector Panel Side	27
5/ Connector Definitions	28
6/ I/O-Area Connectors	29
6.1. HDMI Connector (CN15).....	29
6.2. DP Connector (CN13)	30
6.3. Ethernet Connectors (CN9 & CN10).....	31
6.4. USB Connectors (I/O Area).....	32
7/ Internal Connectors	34
7.1. Power Connector	34
7.1.1. Power Input Wafer (CN1).....	34
7.1.2. CR2032 Battery Power Input Wafer (BAT1).....	34
7.2. DC5V Fan Wafer (FAN1)	35
7.3. SATA (Serial ATA) Port 0 Connector (SATA1).....	36
7.4. HDD Power Output Wafer (CN2)	37
7.5. USB Connectors (Internal) (CN6, CN26 optional).....	38
7.6. Audio AMP Output Wafer (CN12 & CN16).....	40

7.7. Audio Input / Output Pin Header (CN11).....	40
7.8. Front Panel Pin Header (FP1 & FP2)	41
7.9. Serial COM1 - COM6 Ports (CN17 - CN22)	43
7.10. LVDS Panel Connector (LVDS1).....	44
7.11. Backlight Power Output Wafer (CN23).....	46
7.12. Digital Input / Output Wafer (CN14)	47
7.13. mPCIe Socket (MPCIE1).....	48
7.14. NGFF M.2 Key B Socket (CON1)	50
7.15. SIM Interface Wafer for MPCIE1 and M.2 Key B (CN7).....	53
7.16. Micro-SD Card Cage (CN3).....	54
7.17. Switches and Jumpers.....	55
7.17.1. SIM Card Selection (JP1).....	55
7.17.2. Backlight Enable Selection (JP2).....	55
7.17.3. Panel & Backlight Power Selection (JP3).....	56
7.17.4. AT / ATX Power Mode Selection (JP4).....	56
7.17.5. M.2 Key B Activity LED Pin Header (JP5).....	57
7.17.6. MPCIE Activity LED Pin Header (JP6)	57
7.17.7. RTC Reset Selection (JP8).....	58
7.17.8. USB Power Selection (JP9)	58
7.17.9. ME F/W Selection (JP10).....	59
7.17.10. EEPROM Write Protect Selection (JP12)	59
8/ On-Board Connectors & Mating Connector Types	60
9/ BIOS.....	61
9.1. Starting the uEFI BIOS.....	61
9.2. Setup Menus	62
9.2.1. Main Setup Menu	62
9.2.2. Advanced Setup Menu.....	64
9.2.3. Power Setup Menu	78
9.2.4. Boot Setup Menu.....	80
9.2.5. Security Setup Menu	81
9.2.5.1. Remember the password	82
9.2.6. Save & Exit Setup Menu.....	83
Appendix A: List of Acronyms.....	84
About Kontron	85

List of Tables

Table 1: Component Main Data	19
Table 2: Environmental Conditions	20
Table 3: Standards and Certifications	20
Table 4: Processor Support.....	21
Table 5: Memory Operating Frequencies	22
Table 6: Three-displays Configurations	22
Table 7: Supply Voltages.....	23
Table 8: Jumper List.....	24
Table 9: Top Side Internal Connector Pin Assignment.....	24
Table 10: Rear Side Internal Connector Pin Assignment	26
Table 11: Other Component List	26
Table 12: Connector Panel Side Connector List	27
Table 13: Pin Assignment HDMI Connector CN15	29
Table 14: Pin Assignment DP Connector CN13	30

Table 15: Pin Assignment Ethernet Connectors CN9, CN10	31
Table 16: Pin Assignment USB 3.2 Gen 1 / USB 2.0 Connector CN4, CN5.....	32
Table 17: Signal Description	33
Table 18: Pin Assignment CN1.....	34
Table 19: Pin Assignment BAT1	34
Table 20: Pin Assignment FAN1	35
Table 21: Signal description	35
Table 22: Pin Assignment SATA1	36
Table 23: Signal Description	36
Table 24: Pin Assignment CN2	37
Table 25: Pin Assignment CN6	38
Table 26: Pin Assignment CN26 (Optional).....	38
Table 27: Signal Description.....	38
Table 28: Pin Assignment CN12, CN16.....	40
Table 29: Pin Assignment CN8	40
Table 30: Pin Assignment FP1.....	41
Table 31: Signal Description	41
Table 32: Pin Assignment FP2	42
Table 33: Signal Description	42
Table 34: Pin Assignment CN17, CN18.....	43
Table 35: Pin Assignment CN19 - CN22	43
Table 36: Signal Description	43
Table 37: Pin Assignment LVDS1.....	44
Table 38: Signal Description	45
Table 39: Pin Assignment CN23	46
Table 40: Signal Description.....	46
Table 41: Pin Assignment CN14.....	47
Table 42: Pin Assignment MPCIE1	48
Table 43: Pin Assignment CON1.....	50
Table 44: Pin Assignment CN7	53
Table 45: Pin Assignment CN3	54
Table 46: Pin Assignment JP1	55
Table 47: Pin Assignment JP2.....	56
Table 48: Pin Assignment JP3	56
Table 49: Pin Assignment JP4	57
Table 50: Pin Assignment JP5.....	57
Table 51: Pin Assignment JP6.....	57
Table 52: Pin Assignment JP8.....	58
Table 53: Pin Assignment JP9.....	58
Table 54: Pin Assignment JP10.....	59
Table 55: Pin Assignment JP12	59
Table 56: On-Board Connectors & Mating Connector Types.....	60
Table 57: Font Size Table	61
Table 58: Main Setup Menu Sub-Screens and Functions	62
Table 59: List of Acronyms.....	84

List of Figures

Figure 1: System Block Diagram 3.5"-SBC-APL V2.0	18
Figure 2: Top Side	24
Figure 3: Rear Side.....	26
Figure 4: Connector Panel Side.....	27
Figure 5: HDMI Connector CN15	29
Figure 6: DP Connector CN13.....	30
Figure 7: Ethernet Connectors CN9, CN10.....	31
Figure 8: USB 3.2 Gen 1 Connector CN4, CN5.....	32

Figure 9: USB 2.0 High Speed Cable.....	33
Figure 10: USB 3.2 High Speed Cable.....	33
Figure 11: Power Input Wafer CN1.....	34
Figure 12: CR2032 Battery Power Input Wafer BAT1	34
Figure 13: DC5V Fan Wafer FAN1.....	35
Figure 14: SATA Port 0 Connector SATA1.....	36
Figure 15: HDD Power Output Wafer CN2.....	37
Figure 16: USB 2.0 Port DN_1, DN_2 Pin Header CN6.....	38
Figure 17: USB 2.0 Port Wafer CN26 (Optional)	38
Figure 18: 3W Audio AMP Output Wafer CN12 (Left Channel), CN16 (Right Channel).....	40
Figure 19: Audio Input / Output Pin Header CN11	40
Figure 20: Front Panel 1 Pin Header FP1.....	41
Figure 21: Front Panel 2 Pin Header FP2	41
Figure 22: Serial COM CN17 - CN22	43
Figure 23: LVDS Connector LVDS1.....	44
Figure 24: Backlight Power Output Wafer CN23.....	46
Figure 25: Digital Input / Output Wafer CN14.....	47
Figure 26: mPCIe Slot Connector MPCIE1.....	48
Figure 27: NGFF M.2 Key B Slot Connector CON1.....	50
Figure 28: SIM Interface Wafer CN7	53
Figure 29: Micro-SD Card Cage CN3	54
Figure 30: Jumper Connector.....	55
Figure 31: SIM Card Selection (JP1).....	55
Figure 32: Backlight Enable Selection JP2	55
Figure 33: Panel & Backlight Power Selection JP3	56
Figure 34: AT / ATX Power Mode Selection JP4	56
Figure 35: M.2 Key B Activity LED Pin Header JP5	57
Figure 36: MPCIE1 Activity LED Indication JP6	57
Figure 37: RTC Reset Selection JP8.....	58
Figure 38: USB Power Selection JP9.....	58
Figure 39: ME F/W Selection JP10	59
Figure 40: EEPROM Write Protect Selection JP12	59
Figure 41: BIOS Main Menu Screen System Data and Time.....	63
Figure 42: BIOS Advanced Menu.....	65
Figure 43: BIOS Advanced Menu - Display Configuration.....	66
Figure 44: BIOS Advanced Menu - Super IO Configuration.....	67
Figure 45: BIOS Advanced Menu - Super IO Configuration - Serial Port 1 Configuration.....	67
Figure 46: BIOS Advanced Menu - Super IO Configuration - Serial Port 2 Configuration.....	68
Figure 47: BIOS Advanced Menu - Super IO Configuration - Serial Port 3 Configuration.....	69
Figure 48: BIOS Advanced Menu - Super IO Configuration - Serial Port 4 Configuration	69
Figure 49: BIOS Advanced Menu - Super IO Configuration - Serial Port 5 Configuration.....	70
Figure 50: BIOS Advanced Menu - Super IO Configuration - Serial Port 6 Configuration.....	71
Figure 51: BIOS Advanced Menu - CPU Chipset Configuration.....	72
Figure 52: BIOS Advanced Menu - SATA Configuration	73
Figure 53: BIOS Advanced Menu - USB Configuration.....	74
Figure 54: BIOS Advanced Menu - DIO Configuration.....	75
Figure 55: BIOS Advanced Menu - Network Stack	76
Figure 56: BIOS Advanced Menu - H/W Monitor.....	77
Figure 57: BIOS Power Setup Menu	78
Figure 58: BIOS Power Setup Menu - WatchDog Timer Configuration.....	79
Figure 59: BIOS Boot Setup Menu.....	80
Figure 60: BIOS Boot Setup Menu	81
Figure 61: BIOS Boot Setup Menu	83

1/ Introduction

This user guide describes the 3.5"-SBC-APL V2.0 board made by Kontron. This board will also be denoted 3.5"-SBC-APL V2.0 within this user guide.

Use of this user guide implies a basic knowledge of PC-AT hardware and software. This user guide focuses on describing the 3.5"-SBC-APL V2.0 board's special features and is not intended to be a standard PC-AT textbook.

New users are recommended to study the short installation procedure stated in the following chapter before switching on the power.

All configuration and setup of the CPU board is either carried out automatically or manually by the user via the BIOS setup menus.

Latest revision of this user guide, datasheet, thermal simulations, BIOS, drivers, BSP's (Board Support Packages), mechanical drawings (2D and 3D) can be downloaded from Kontron's Web Page.

2/ Installation Procedures

2.1. Installing the Board

NOTICE



ESD Sensitive Device

Electrostatic discharge (ESD) can damage equipment and impair electrical circuitry.

- ▶ Wear ESD-protective clothing and shoes
- ▶ Wear an ESD-preventive wrist strap attached to a good earth ground
- ▶ Check the resistance value of the wrist strap periodically (1 MΩ to 10 MΩ)
- ▶ Transport and store the board in its antistatic bag
- ▶ Handle the board at an approved ESD workstation
- ▶ Handle the board only by the edges

To get the board running follow these steps. If the board shipped from KONTRON already has components like RAM and CPU cooler mounted, then skip the relevant steps below.

1. Turn off the PSU (Power Supply Unit)

NOTICE

Turn off PSU (Power Supply Unit) completely (no mains power connected to the PSU) or leave the Power Connectors unconnected while configuring the board. Otherwise, components (RAM, LAN cards etc.) might get damaged. Make sure to use +12 VDC single supply only. Alternatively, use a standard ATX PSU with suitable cable kit and PS-ON# active.

2. Insert the DDR3L 1867 module(s)

Be careful to push the memory module(s) in the slot(s) before locking the tabs.

3. Connecting interfaces

Insert all external cables for hard disk, keyboard etc. A monitor must be connected in order to change BIOS settings.

4. Connect and turn on PSU

Connect PSU to the board by the +12 V 3.0mm pitch 1x4-pin wafer connector.

5. BIOS setup

Enter the BIOS setup by pressing the key during boot up.

Enter "Exit Menu" and Load Setup Defaults.



To clear all BIOS setting, including Password protection, activate "Clear CMOS Jumper" for 10 sec (without power connected).

6. Mounting the board in chassis

NOTICE

When mounting the board to chassis etc. please note that the board contains components on both sides of the PCB that can easily be damaged if board is handled without reasonable care. A damaged component can result in malfunction or no function at all.

When fixing the board on a chassis, it is recommended to use screws with an integrated washer and a diameter of > 7 mm. Do not use washers with teeth, as they can damage the PCB and cause short circuits.

2.2. Chassis Safety Standards

Before installing the 3.5"-SBC-APL V2.0 in the chassis, users must evaluate the end product to ensure compliance with the requirements of the IEC60950-1 safety standard:

- ▶ The board must be installed in a suitable mechanical, electrical and fire enclosure.
- ▶ The system, in its enclosure, must be evaluated for temperature and airflow considerations.
- ▶ The board must be powered by a CSA or UL approved power supply that limits the maximum input current.
- ▶ For interfaces having a power pin such as external power or fan, ensure that the connectors and wires are suitably rated. All connections from and to the product shall be with SELV circuits only.
- ▶ Wires have suitable rating to withstand the maximum available power.
- ▶ The peripheral device enclosure fulfils the IEC60950-1 fire protecting requirements.

2.3. Lithium Battery Replacement

If replacing the lithium battery follow the replacement precautions stated in the notification below:

CAUTION

Danger of explosion if the lithium battery is incorrectly replaced.

- ▶ Replace only with the same or equivalent type recommended by the manufacturer
- ▶ Dispose of used batteries according to the manufacturer's instructions

VORSICHT! Explosionsgefahr bei unsachgemäßem Austausch der Batterie.

- ▶ Ersatz nur durch denselben oder einen vom Hersteller empfohlenen gleichwertigen Typ
- ▶ Entsorgung gebrauchter Batterien nach Angaben des Herstellers

ATTENTION! Risque d'explosion avec l'échange inadéquat de la batterie.

- ▶ Remplacement seulement par le même ou un type équivalent recommandé par le producteur
- ▶ L'évacuation des batteries usagées conformément à des indications du fabricant

PRECAUCION! Peligro de explosión si la batería se sustituye incorrectamente.

- ▶ Sustituya solamente por el mismo o tipo equivalente recomendado por el fabricante
- ▶ Disponga las baterías usadas según las instrucciones del fabricante

ADVARSEL! Lithiumbatteri – Eksplosjonsfare ved feilagtig håndtering.

- ▶ Udsiftning må kun ske med batteri af samme fabrikat og type
- ▶ Levér det brugte batteri tilbage til leverandøren

ADVARSEL! Eksplosjonsfare ved feilaktig skifte av batteri.

- ▶ Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten
- ▶ Brukte batterier kasseres i henhold til fabrikantens instruksjoner

VARNING! Explosionsfara vid felaktigt batteribyte.

- ▶ Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren
- ▶ Kassera använt batteri enligt fabrikantens instruktion


VAROITUS! Paristo voi räjähtää, jos se on virheellisesti asennettu.

- ▶ Vaihda paristo ainoastaan lalteval- mistajan suosittellemaan tyyppiln
 - ▶ Hävitä käytetty paristo valmistajan ohjeiden mukaisesti
-

3/ System Specifications

3.1. System Block Diagram

Figure 1: System Block Diagram 3.5"-SBC-APL V2.0

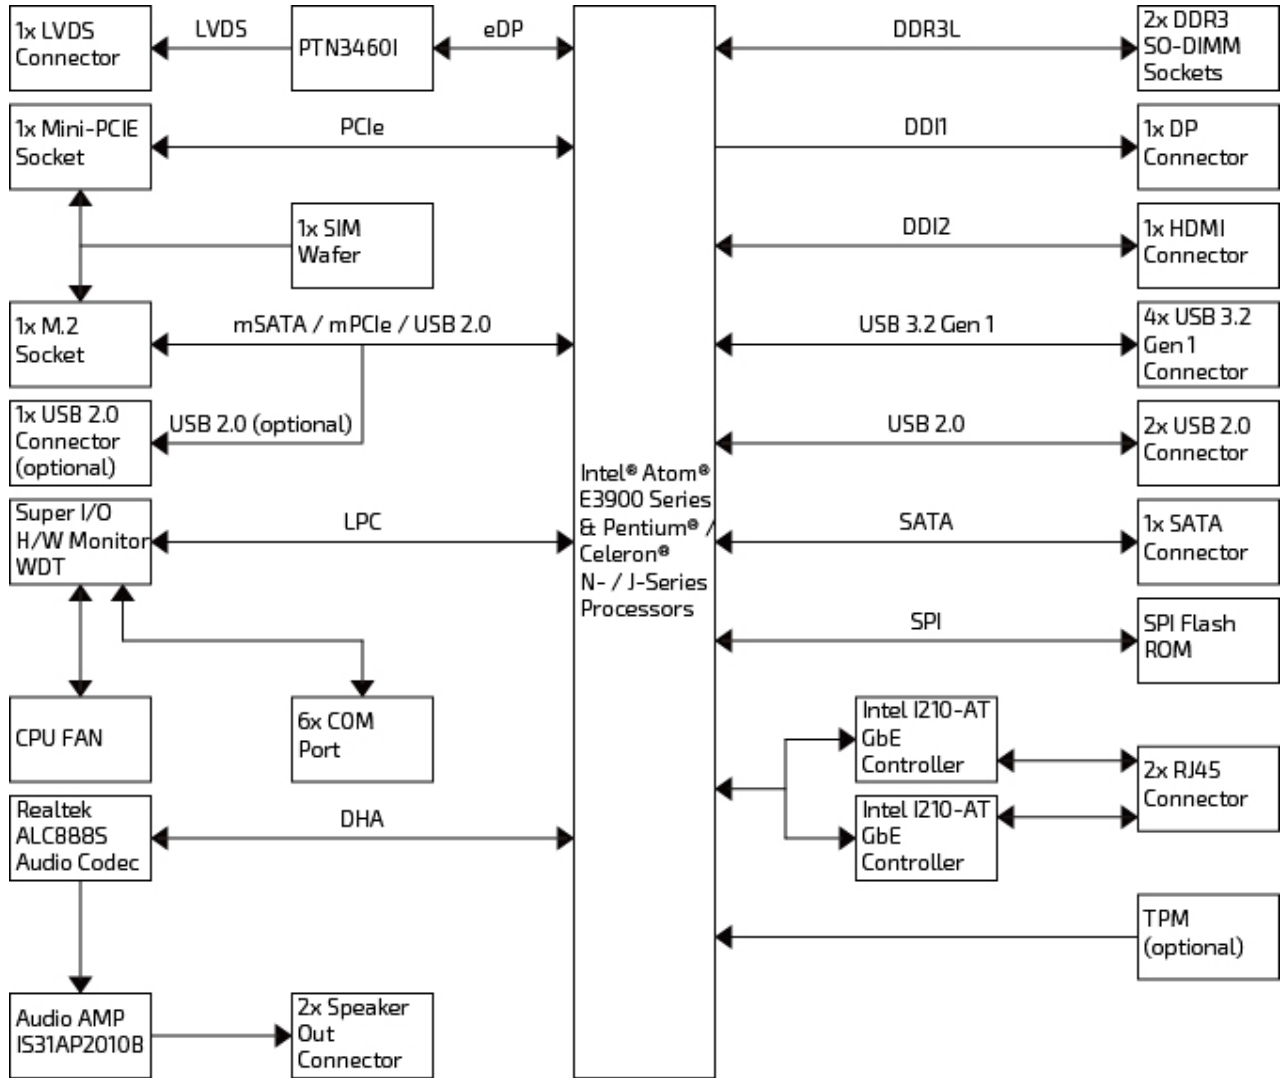

3.2. Component Main Data

The table below summarizes the features of the 3.5"-SBC-APL V2.0 single board computer.

Table 1: Component Main Data

System	
Processor	Intel® Atom® E3900 Series & Pentium® / Celeron® N- / J-Series Processors
Memory	2x DDR3L SO-DIMM memory socket
Video	
Display Interface	<ul style="list-style-type: none"> ▶ 1x LVDS (18/24-bit, 1/2-ch) ▶ 1x HDMI (on rear, 3840 x 2160 @ 30 Hz) ▶ 1x DP (on rear, 4096 x 2160 @ 60 Hz)
Multiple Display	Triple
Audio	
Audio Codec	Realtek ALC888S
Audio Interface	<ul style="list-style-type: none"> ▶ 1x Speaker-out (Stereo, 3 W, by header) ▶ 1x Line-in (by header, extreme temperature model excluded) ▶ 1x Line-out (by header, extreme temperature model excluded) ▶ 1x Mic-in (by header, extreme temperature model excluded)
Network Connection	
Ethernet	2x GbE LAN (RJ45 on rear, Intel® I210-AT)
Peripheral Connection	
USB	<ul style="list-style-type: none"> ▶ 4x USB 3.2 Gen 1 (Type A on rear) ▶ 2x USB 2.0 (by header, Configuration 1) ▶ 3x USB 2.0 (by header, Configuration 2)
Serial Port	<ul style="list-style-type: none"> ▶ 2x RS232/422/485 (by wafer, auto flow control function for RS485) ▶ 4x RS232 (by wafer)
Other I/ Os	<ul style="list-style-type: none"> ▶ 8x DIO (by header)
Storage & Expansion	
Storage & Expansion	<ul style="list-style-type: none"> ▶ 1x SATA 3.0 (2x by BOM option in case of eliminating M.2 SATA support) ▶ 1x Micro SD Cage (on front) ▶ 1x mPCIe (full size) ▶ 1x M.2 Key B (Type 2242, mixed w/ USB 2.0 / SATA / mPCIe x1, Configuration 1) ▶ 1x M.2 Key B (Type 2242, mixed w/ SATA / mPCIe x1, Configuration 2) ▶ 1x SIM Card Cage (by wafer, switchable between mPCIe and M.2)
Power	
Input Voltage	DC 12 V
Connector	1x 4-pin Wafer (Straight & Right Angle dual-footprint)
Firmware	
BIOS	AMI uEFI BIOS w/ 128 Mb SPI Flash
Watchdog	Programmable WDT to generate system reset event
H/ W Monitor	Voltages, Temperatures
Real Time Clock	Processor integrated RTC

Security	TPM 2.0 (optional, Infineon SLB 9665)
System Control & Monitoring	
FP Header	<ul style="list-style-type: none"> ▶ 1x Header for Reset button, HDD LED & External Speaker ▶ 1x Header for Power button, Power LED & SM bus ▶ 1x Header for mPCIe activity LED ▶ 1x Header for M.2 activity LED
Cooling	
FAN	1x Wafer for System Smart Fan
Software	
OS Support	Windows 10, Linux
Mechanical	
Dimension (L x W)	3.5" ECX (146 mm x 105 mm / 5.75" x 4.13")

3.3. Environmental Conditions

The 3.5"-SBC-APL V2.0 is compliant with the following environmental conditions. It is the customer's responsibility to provide sufficient airflow around each of the components to keep them within the allowed temperature range.

Table 2: Environmental Conditions

Operating Temperature	0 °C ~ 60 °C / 32 °F ~ 140 °F (Standard) -20 °C ~ 70 °C / -4 °F ~ 158 °F (Extended) -40 °C ~ 85 °C / -40 °F ~ 185 °F (Extreme)
Storage Temperature	-20 °C ~ 80 °C / -4 °F ~ 176 °F (Standard) -40 °C ~ 85 °C / -40 °F ~ 185 °F (Extended) -55 °C ~ 85 °C / -67 °F ~ 185 °F (Extreme)
Humidity	0 % ~ 95 %

3.4. Standards and Certifications

The 3.5"-SBC-APL V2.0 meets the following standards and certification tests.

Table 3: Standards and Certifications

CE Class B	<ul style="list-style-type: none"> ▶ EN 55032: 2015 + AC: 2016, CISPR 32: 2015 + COR1: 2016: Class B ▶ AS/NZS CISPR 32: 2015: Class B ▶ EN 61000-3-2: 2014, IEC 61000-3-2: 2014 ▶ EN 61000-3-3: 2013, IEC 61000-3-3: 2013 ▶ EN 55024: 2010 + A1: 2015, CISPR 24: 2010 + A1: 2015 ▶ EN 61000-4-2: 2009, IEC 61000-4-2: 2008 ▶ EN 61000-4-3: 2006 + A1: 2008 + A2: 2010, IEC 61000-4-3: 2006 + A1: 2007, + A2: 2010 ▶ EN 61000-4-4: 2012, IEC 61000-4-4: 2012 ▶ EN 61000-4-5: 2014, IEC 61000-4-5: 2014 ▶ EN 61000-4-6: 2014 + AC: 2015, IEC 61000-4-6: 2013 ▶ EN 61000-4-8: 2010, IEC 61000-4-8: 2009
------------	---

	▶ EN 61000-4-11: 2004, IEC 61000-4-11: 2004
FCC Class B	▶ FCC CFR Title 47 Part 15 Subpart B: 2017 - Section 15.107 and 15.109 ▶ ANSI C63.4-2014 ▶ ICES-003 Issue 6: 2016 Class B

3.5. Processor Support

The 3.5"-SBC-APL V2.0 is designed to support Intel® Atom® E3900 Series & Pentium® / Celeron® N- / J-Series Processors. The BGA CPU is remounted from factory. Kontron has defined the board versions as listed in the following table, so far all based on Embedded CPUs. Other versions are expected at a later date.

Table 4: Processor Support

Name	Core #	Speed	Turbo	Embedded	Cache	Socket	TDP	Tj
Atom® x7-E3950	4	1.60 GHz	2.00 GHz	Yes	2M	FCBGA1296	12 W	110 °C
Atom® x5-E3940	4	1.60 GHz	1.80 GHz	Yes	2M	FCBGA1296	9.5 W	110 °C
Atom® x5-E3930	2	1.30 GHz	1.80 GHz	Yes	2M	FCBGA1296	6.5 W	110 °C
Pentium® N4200	4	1.10 GHz	2.50 GHz	Yes	2M	FCBGA1296	6 W	105 °C
Celeron® N3350	2	1.10 GHz	2.40 GHz	Yes	2M	FCBGA1296	6W	105 °C
Celeron® J3455	4	1.50 GHz	2.30 GHz	Yes	2M	FCBGA1296	10 W	105 °C
Celeron® J3355	2	2.00 GHz	2.50 GHz	Yes	2M	FCBGA1296	10 W	105 °C

Sufficient cooling must be applied to the CPU in order to remove the effect as listed as TDP (Thermal Design Power) in above table. The sufficient cooling is also depending on the worst case maximum ambient operating temperature and the actual worst case load of processor.

3.6. System Memory Support

The 3.5"-SBC-APL V2.0 has one DDR3L SO-DIMM socket. The sockets support the following memory features:

- ▶ 2x DDR3L 1.35V SO-DIMM 204-pin
- ▶ Up to 8GB
- ▶ SPD timing supported
- ▶ Non ECC support

The installed DDR3L SO-DIMM should support the Serial Presence Detect (SPD) data structure. This allows the BIOS to read and configure the memory controller for optimal performance. If non-SPD memory is used, the BIOS will attempt to configure the memory settings, but performance and reliability may be impacted, or the board may not be able to boot totally.

3.6.1. Memory Operating Frequencies

In all modes, the frequency of system memory is the lowest frequency of all the memory modules placed in the system. Each memory module's frequency can be determined through the SPD registers on the memory modules.

The table below lists the resulting operating memory frequencies based on the combination of SO-DIMMs and processor.

Table 5: Memory Operating Frequencies

SO-DIMM Type	Module Name	Memory Data Transfer (MT/s)	Processor System Bus Frequency (MHz)	Resulting Memory Clock Frequency (MHz)	Peak Transfer Rate (MB/s)
DDR3L 1867	PC3-14900	1867	933	233	14933

Memory modules have in general a much lower longevity than embedded motherboards, and therefore EOL of modules can be expected several times during lifetime of the motherboard.

As a minimum it is recommend using Kontron memory modules for prototype system(s) in order to prove stability of the system and as for reference.

For volume production you might request to test and qualify other types of RAM. In order to qualify RAM it is recommend configuring 3 systems running RAM Stress Test program in heat chamber at 60° C for a minimum of 24 hours.

3.7. On-board Graphics Subsystem

The 3.5"-SBC-APL V2.0 supports Intel® HD Graphics technology for high quality graphics capabilities. All 3.5"-SBC-APL V2.0 versions support three displays pipes.

Three displays can be used simultaneously and be used to implement independent or cloned display configuration.

Table 6: Three-displays Configurations

Display 1	Display 2	Display	Max. Resolution (Px) at 60 Hz		
			Display 1	Display 2	Display 3
LVDS	HDMI	DP	1920x1200	2560x1440	4096x2160



The HDMI display may go to a black screen randomly when an extreme-temperature model works at an ambient temperature of 85 °C. This problem can be improved by applying a thermal pad on the HDMI level shifter chip (Figure 3, pos. 3). The issue of thermal dissipation of the HDMI level shifter chip should be evaluated when designing thermal modules.

3.8. Power Supply

In order to ensure safe operation of the board, the input power supply must monitor the supply voltage and shut down if the supply is out of range – refer to the actual power supply specification. Please note, in order to keep the power consumption to a minimal level, boards do not implement a guaranteed minimum load. In some cases, this can lead to compatibility problems with ATX power supplies that require a minimum load to stay in regulation. The 3.5"-SBC-APL V2.0 board must be powered through the ATX+12V-4p (4-pole) connector using standard ATX power supply.

ATX12V supply: ATX+12V-4p connector must be used in according to the ATX12V PSU standard.

NOTICE

Hot Plugging power supply is not supported. Hot plugging might damage the board.

The requirements to the supply voltages are as follows:

Table 7: Supply Voltages

Supply	Min.	Max.	Note
+12 V	11.4 V	12.6 V	Should be $\pm 5\%$ for compliance with the ATX specification

4/ Connector Locations

4.1. Top Side

Figure 2: Top Side

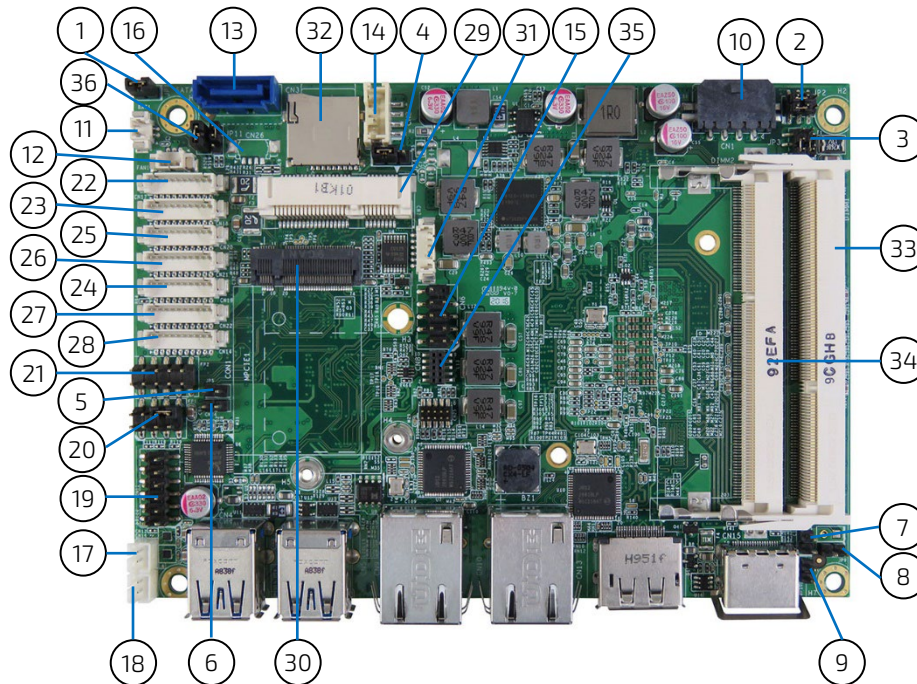


Table 8: Jumper List

Item	Designation	Description	See Chapter
1	JP1	SIM Card Selection	7.17.1
2	JP2	Backlight Enable Selection	7.17.2
3	JP3	Panel & Backlight Power Selection	7.17.3
4	JP4	AT / ATX Power Mode Selection	7.17.4
5	JP5	M.2 Key B LED Pin Header	7.17.5
6	JP6	MPCIE Activity LED Pin Header	7.17.6
7	JP8	RTC Reset Selection	7.17.7
8	JP9	USB Power Selection	7.17.8
9	JP10	ME F/W Selection	7.17.9
36	JP12	EEPROM Write Protect Selection	7.17.10

Table 9: Top Side Internal Connector Pin Assignment

Item	Designation	Description	See Chapter
10	CN1	DC 12V Power Input Wafer	7.1.1
11	BAT1	CR2032 Battery Power Input Wafer	7.1.2
12	FAN1	DC5V Fan Wafer	7.2
13	SATA1	Serial ATA Port 0 Connector	7.3
14	CN2	HDD Power Output Wafer	7.4
15	CN6	USB 2.0 Port DN_1, DN_2 Pin Header	7.5
16	CN26	USB 2.0 Port Wafer (Optional)	7.5

Item	Designation	Description	See Chapter
17	CN12	Left Channel 3W Audio AMP Output Wafer	7.6
18	CN16	Right Channel 3W Audio AMP Output Wafer	7.6
19	CN11	Audio Input / Output Pin Header	7.7
20	FP1	Front Panel 1 Pin Header	7.8
21	FP2	Front Panel 2 Pin Header	7.8
22	CN17	COM1 RS-232/422/485 Port Wafer	7.9
23	CN18	COM2 RS-232/422/485 Port Wafer	7.9
24	CN19	COM3 RS-232 Port Wafer	7.9
25	CN20	COM4 RS-232 Port Wafer	7.9
26	CN21	COM5 RS-232 Port Wafer	7.9
27	CN22	COM6 RS-232 Port Wafer	7.9
28	CN14	Digital Input / Output Wafer	7.12
29	MPCIE1	Mini-PCI Express v1.2 Socket (Full Size)	7.13
30	CON1	NGFF M.2 Key B Socket	7.14
31	CN7	SIM Interface Wafer for MPCIE1 and M.2 Key B	7.15
32	CN3	Micro-SD Card Cage	7.16
33	DIMM1	DDR3L Memory SO-DIMM Socket	3.6
34	DIMM2	DDR3L Memory SO-DIMM Socket	3.6
35	CN8	P80_Header	

4.2. Rear Side

Figure 3: Rear Side

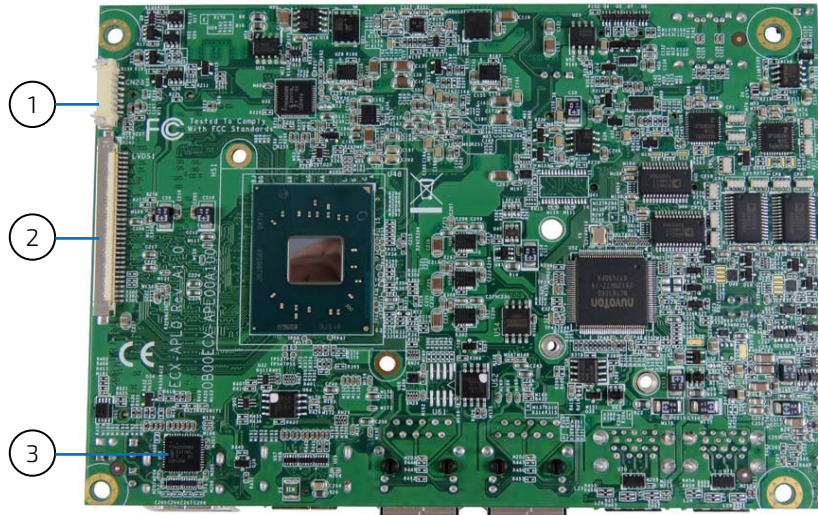


Table 10: Rear Side Internal Connector Pin Assignment

Item	Designation	Description	See Chapter
1	CN23	Backlight Power Output Wafer	7.11
2	LVDS1	18/24-bit, 1/2-channel LVDS Panel Connector	7.10

Table 11: Other Component List

Item	Designation	Description	See Chapter
3	U66	HDMI Level Shifter Chip	3.7

4.3. Connector Panel Side

Figure 4: Connector Panel Side

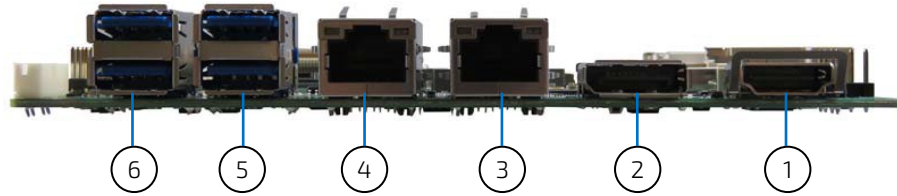


Table 12: Connector Panel Side Connector List

Item	Designation	Description	See Chapter
1	CN15	HDMI Connector	6.1
2	CN13	DP Connector	6.2
3	CN10	GbE LAN2 RJ-45 Connector	6.3
4	CN9	GbE LAN1 RJ-45 Connector	6.3
5	CN5	USB 3.2 Gen 1 Port 3,4 Type-A Connector	6.4
6	CN4	USB 3.2 Gen 1 Port 1,2 Type-A Connector	6.4

5/ Connector Definitions

The following defined terms are used within this user guide to give more information concerning the pin assignment and to describe the connector's signals.

Defined Term	Description
Pin	Shows the pin numbers in the connector
Signal	The abbreviated name of the signal at the current pin The notation "XX#" states that the signal "XX" is active low
Note	Special remarks concerning the signal
Designation	Type and number of item described
See Chapter	Number of the chapter within this user guide containing a detailed description

The abbreviation TBD is used for specifications that are not available yet or which are not sufficiently specified by the component vendors.

6/ I/O-Area Connectors

6.1. HDMI Connector (CN15)

The HDMI connector is based on standard HDMI type A.

Figure 5: HDMI Connector CN15

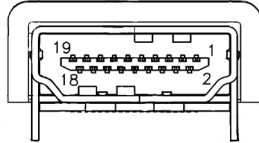


Table 13: Pin Assignment HDMI Connector CN15

Pin	Signal	Description	Note
1	TMDS Data2+		
2	Ground		
3	TMDS Data2-		
4	TMDS Data1+		
5	Ground		
6	TMDS Data1-		
7	TMDS Data0+		
8	Ground		
9	TMDS Data0-		
10	TMDS Clock+		
11	Ground		
12	TMDS Clock-		
13	Reserved		
14	Reserved		
15	DDC_CLK		
16	DDC_DATA		
17	Ground		
18	+5 V Power		
19	Hot Plug Detect		

6.2. DP Connector (CN13)

The DP (DisplayPort) connector is based on standard DP female port.

Figure 6: DP Connector CN13

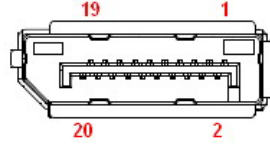


Table 14: Pin Assignment DP Connector CN13

Pin	Signal	Description	Note
1	TX0+		
2	GND		
3	TX0-		
4	TX1+		
5	GND		
6	TX1-		
7	TX2+		
8	GND		
9	TX2-		
10	TX3+		
11	GND		
12	TX3-		
13	GND		
14	GND		
15	AUX+		
16	GND		
17	AUX-		
18	HPD		
19	GND		
20	PWR		

6.3. Ethernet Connectors (CN9 & CN10)

The 3.5"-SBC-APL V2.0 supports two channels of 10/100/1000 Mbit Ethernet, which are based Intel® I210-AT controller.

In order to achieve the specified performance of the Ethernet port, Category 5 twisted pair cables must be used with 10/100 MByte and Category 5E, 6 or 6E with 1 Gbit LAN networks.

The signals for the Ethernet ports are as follows:

Figure 7: Ethernet Connectors CN9, CN10

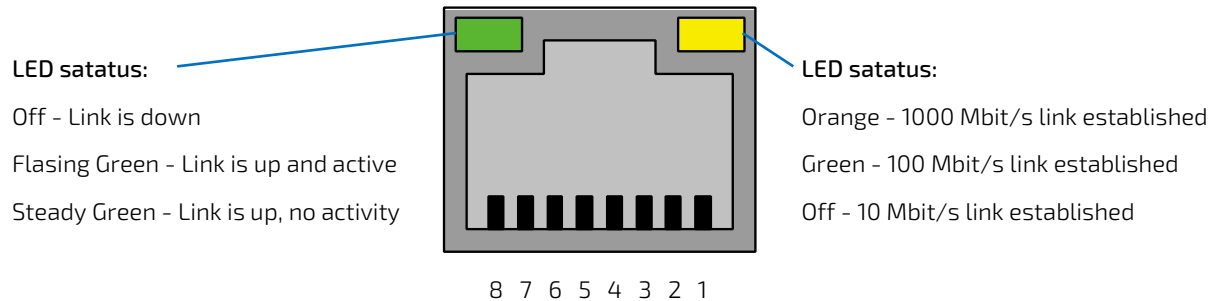


Table 15: Pin Assignment Ethernet Connectors CN9, CN10

Pin	Signal	Note
1	TX1+	
2	TX1-	
3	TX2+	
4	TX3+	
5	TX3-	
6	TX2-	
7	TX4+	
8	TX4-	

Signal Description

Signal	Description
TX1+ / TX1-	In MDI mode, this is the first pair in 1000Base-T, i.e. the BI_DA+/- pair, and is the transmit pair in 10Base-T and 100Base-TX. In MDI crossover mode, this pair acts as the BI_DB+/- pair, and is the receive pair in 10Base-T and 100Base-TX.
TX2+ / TX2-	In MDI mode, this is the second pair in 1000Base-T, i.e. the BI_DB+/- pair, and is the receive pair in 10Base-T and 100Base-TX. In MDI crossover mode, this pair acts as the BI_DA+/- pair, and is the transmit pair in 10Base-T and 100Base-TX.
TX3+ / TX3-	In MDI mode, this is the third pair in 1000Base-T, i.e. the BI_DC+/- pair. In MDI crossover mode, this pair acts as the BI_DD+/- pair.
TX4+ / TX4-	In MDI mode, this is the fourth pair in 1000Base-T, i.e. the BI_DD+/- pair. In MDI crossover mode, this pair acts as the BI_DC+/- pair.

'MDI' – media dependent Interface

6.4. USB Connectors (I/O Area)

The external I/O connector panel supports two dual USB 3.2 Gen 1 connectors.



USB 3.2 Gen 1 ports are backward compatible with USB 2.0.

Figure 8: USB 3.2 Gen 1 Connector CN4, CN5

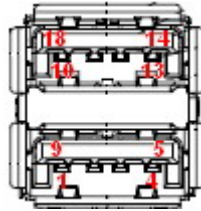


Table 16: Pin Assignment USB 3.2 Gen 1 / USB 2.0 Connector CN4, CN5

Pin	Signal	Note
Top		
18	USBB_TX+	USB 3.2 Gen 1 Tx. Differential Pair (+)
17	USBB_TX-	USB 3.2 Gen 1 Tx. Differential Pair (-)
16	GND	
15	USBB_RX+	USB 3.2 Gen 1 Tx. Differential Pair (+)
14	USBB_RX-	USB 3.2 Gen 1 Tx. Differential Pair (-)
13	GND	
12	USBB_D-	USB 2.0 Differential Pair (+)
11	USBB_D-	USB 2.0 Differential Pair (-)
10	+USBB_VCC*	+5 V Supply for USB device
Bottom		
9	USBA_TX+	USB 3.2 Gen 1 Tx. Differential Pair (+)
8	USBA_TX-	USB 3.2 Gen 1 Tx. Differential Pair (-)
7	GND	
6	USBA_RX+	USB 3.2 Gen 1 Tx. Differential Pair (+)
5	USBA_RX-	USB 3.2 Gen 1 Tx. Differential Pair (-)
4	GND	
3	USBA_D-	USB 2.0 Differential Pair (+)
2	USBA_D-	USB 2.0 Differential Pair (-)
1	+USBA_VCC*	+5 V Supply for USB device




* The power source of +USBVCC can be selected by JP9.

Table 17: Signal Description

Signal	Description
USBn_TX+, USBn_TX-, USBn_RX+, USBn_RX-, USBn_D-, USBn_D-	Differential pair works as serial differential receive/transmit data lines. (n= A, B)
+USBn_VCC	5 V supply for external devices. VCC is supplied during power-down to allow wakeup on USB device activity. Protected by a 1A current limiting IC covering each of the USB port. (n= A, B)


For HiSpeed rates it is required to use a USB cable, which is specified in USB 2.0 standard:

Figure 9: USB 2.0 High Speed Cable

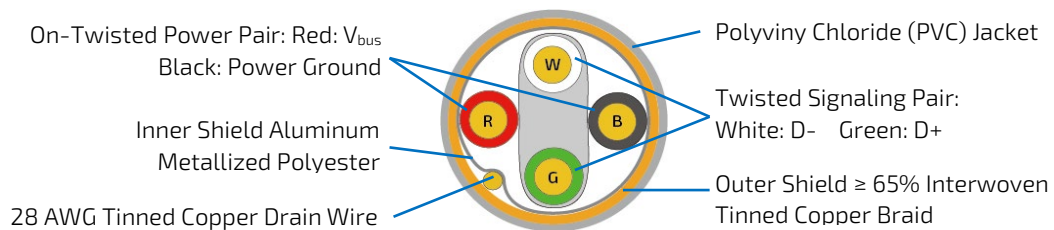

For USB 3.2 Gen 1 cabling it is required to use only HiSpeed USB cable, specified in USB 3.2 standard:

Figure 10: USB 3.2 High Speed Cable

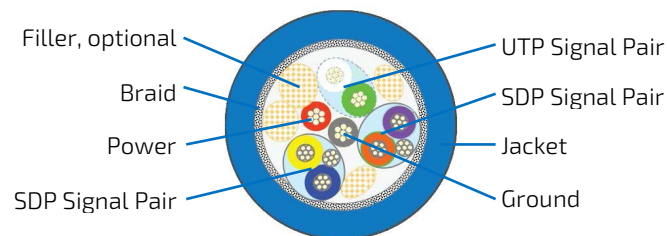

7/ Internal Connectors

7.1. Power Connector

Power connector must be used to supply the board with +12 VDC ($\pm 10\%$).

NOTICE

Hot plugging any of the power connector is not allowed.

Hot plugging might damage the board. In other words, turn off main supply etc. to make sure all the power lines are turned off when connecting to the motherboard.

7.1.1. Power Input Wafer (CN1)

Figure 11: Power Input Wafer CN1




Table 18: Pin Assignment CN1

Pin	Signal	Description
1	+12Vin	Power +12 V
2	GND	Ground
3	GND	Ground
4	+12Vin	Power +12 V

7.1.2. CR2032 Battery Power Input Wafer (BAT1)

Figure 12: CR2032 Battery Power Input Wafer BAT1



Table 19: Pin Assignment BAT1

Pin	Signal	Description
1	Battery+	
2	Battery-	

7.2. DC5V Fan Wafer (FAN1)

The CPU Fan Wafer (FAN1) is used for the connection of the Fan for the CPU.

Figure 13: DC5V Fan Wafer FAN1




Table 20: Pin Assignment FAN1

Pin	Signal	Description
1	SENSE	Sense signal
2	+5V	Power +5 V
3	GND	Ground

Table 21: Signal description

Signal	Description
GND	Power Supply GND signal
5 V	+5 V supply for fan
SENSE	Sense input signal from the fan, for rotation speed supervision RPM (Rotations Per Minute). The signal shall be generated by an open collector transistor or similar.

7.3. SATA (Serial ATA) Port 0 Connector (SATA1)

The SATA connector supplies the data connection for the SATA hard disk and is SATA 3.0 compatible.

Figure 14: SATA Port 0 Connector SATA1



Table 22: Pin Assignment SATA1

Pin	Signal	Note
1	GND	
2	TX+	
3	TX-	
4	GND	
5	RX-	
6	RX+	
7	GND	

Table 23: Signal Description

Signal	Description
RX+ / RX-	Host transmitter differential signal pair
TX+ / TX-	Host receiver differential signal pair

7.4. HDD Power Output Wafer (CN2)

Figure 15: HDD Power Output Wafer CN2



Table 24: Pin Assignment CN2

Pin	Signal	Note
1	+12V	
2	GND	
3	GND	
4	+5V	

7.5. USB Connectors (Internal) (CN6, CN26 optional)

The USB port pin header CN6 supports two USB 2.0 ports and the optional USB port wafer CN26 supports one USB 2.0 port. CN26 shares the USB 2.0 signal of M.2 Key B (CON1).

Figure 16: USB 2.0 Port DN_1, DN_2 Pin Header CN6

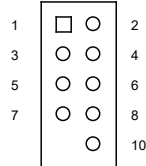


Table 25: Pin Assignment CN6

Pin	Signal	Note
1	+USBVCC	
2	+USBVCC	
3	USB_A-	
4	USB_B-	
5	USB_A+	
6	USB_B+	
7	GND	
8	GND	
9	KEY	
10	GND	



* The power source of +USBVCC can be selected by JP9.

Figure 17: USB 2.0 Port Wafer CN26 (Optional)




Table 26: Pin Assignment CN26 (Optional)

Pin	Signal	Note
1	+USBVCC	
2	USB_-	
3	USB_+	
4	GND	

Table 27: Signal Description

Signal	Description
+USBVCC	5 V supply for external devices. SB5V is supplied during power down to allow wakeup on USB device activity. Protected by active power switch 1 A fuse for each USB port.
USB_-/+ USB_A_-/+ USB_B_-/+	Universal Serial Bus Differentials: Bus Data / Address / Command Bus.

7.6. Audio AMP Output Wafer (CN12 & CN16)

The Speaker audio-out interface is available through the wafers CN12 and CN16. These outputs are shared with the audio output (Line-out) signals of the audio pin header CN11.

Figure 18: 3W Audio AMP Output Wafer CN12 (Left Channel), CN16 (Right Channel)




Table 28: Pin Assignment CN12, CN16

Pin	Signal	Note
1	Speaker+	
2	Speaker-	

7.7. Audio Input / Output Pin Header (CN11)

The audio input / output pin header provides audio output (Line-Out), audio input (Line-In) and microphone (Mic-In) signals through the wafer CN11. The audio output signals are shared with those of the speaker connectors CN12 & CN16. Extreme temperature models don't have this pin header.

Figure 19: Audio Input / Output Pin Header CN11

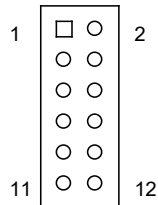


Table 29: Pin Assignment CN8

Pin	Signal	Note
1	MIC-In_L	
2	MIC-In_R	
3	MIC-In_JD#	
4	GND	
5	Line-In_L	
6	Line-In_R	
7	Line-In_JD#	
8	GND	
9	Line-Out_L	
10	Line-Out_R	

Pin	Signal	Note
11	Line-Out_JD#	
12	GND	

7.8. Front Panel Pin Header (FP1 & FP2)

Figure 20: Front Panel 1 Pin Header FP1

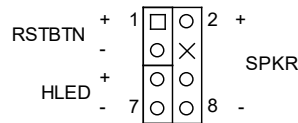


Table 30: Pin Assignment FP1

Pin	Signal	Note
1	Reset Button +	
2	Speaker +	
3	Reset Button -	
4	NC	
5	HDD LED +	
6	Internal Speaker -	
7	HDD LED -	
8	Speaker -	



Internal Buzzer is enabled when Pin6-8 is shorted.

Table 31: Signal Description

Signal	Description
Reset Button -/+	Reset Button. This 2-pin connector is for chassis mounted reset button for system reboot without turning off the system power.
HDD LED -/+	Hard Disk Drive Activity LED. This 2-pin connector is for HDD Activity LED. Connect the HDD Activity LED cable to this connector. The HDD LED lights up or flashes when data is read from or written to the HDD.
Internal Speaker - Speaker -/+	System warning speaker. The speaker allows user to hear beeps and warnings.

Figure 21: Front Panel 2 Pin Header FP2

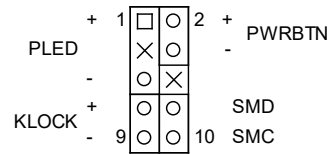


Table 32: Pin Assignment FP2

Pin	Signal	Note
1	Power LED +	
2	Power Button +	
3	NC	
4	Power Button -	
5	Power LED -	
6	SMB_ALERT#	
7	BATLOW#	
8	SMBus Data	
9	GND	
10	SMBus Clock	

Table 33: Signal Description

Signal	Description
Power LED -/+	System Power LED. The power LED lights up when users turn on the system power, and blinks when the system is in sleep mode.
Power Button -/+	The 2-pin connector is for the system power button. Pressing the power button turns the system on or puts the system in sleep or soft-off mode depending on the operating system settings. Pressing the power switch for more than four seconds while the system turns from ON to OFF.
SMB_ALERT#	System Management Bus Alert
SMBus Data	System Management Bus bidirectional data line
SMBus Clock	System Management Bus bidirectional clock line
BATLOW#	Battery low input. This signal may be driven low by external circuitry to signal that the system battery is low. It also can be used to signal some other external power management event.

7.9. Serial COM1 - COM6 Ports (CN17 - CN22)

Figure 22: Serial COM CN17 - CN22




Table 34: Pin Assignment CN17, CN18

Pin	RS232 Signal	RS422 Signal	Half Duplex RS485 Signal	Full Duplex RS485 Signal	Note
1	DCD	TX-	DATA-	TX-	
2	DSR	N/A	N/A	N/A	
3	RXD	TX+	DATA+	TX+	
4	RTS	N/A	N/A	N/A	
5	TXD	RX+	N/A	RX+	
6	CTS	N/A	N/A	N/A	
7	DTR	RX-	N/A	RX-	
8	RI	N/A	N/A	N/A	
9	GND	GND	GND	GND	
10	+5V	+5V	+5V	+5V	

Table 35: Pin Assignment CN19 - CN22

Pin	RS232 Signal	Note
1	DCD	
2	DSR	
3	RXD	
4	RTS	
5	TXD	
6	CTS	
7	DTR	
8	RI	
9	GND	
10	+5V	

Table 36: Signal Description

Signal	Description
TXD	Transmitted Data, sends data to the communications link. The signal is set to the marking state (-12

Signal	Description
	V) on hardware reset when the transmitter is empty or when loop mode operation is initiated.
RXD	Received Data, receives data from the communications link.
DTR	Data Terminal Ready, indicates to the modem etc. that the on-board UART is ready to establish communication link.
DSR	Data Set Ready, indicates that the modem etc. is ready to establish a communications link.
RTS	Request To Send, indicates to the modem etc. that the on-board UART is ready to exchange data.
CTS	Clear To Send, indicates that the modem or data set is ready to exchange data.
DCD	Data Carrier Detect, indicates that the modem or data set has detected the data carrier.
RI	Ring Indicator, indicates that the modem has received a ringing signal from the telephone line.
TX+/-	Transmitted Data differential pair sends data to the communications link.
RX+/-	Received Data differential pair receives data from the communications link.
GND	Power Supply GND signal

7.10. LVDS Panel Connector (LVDS1)

The 18/24-bit, 1/2-channel LVDS connector is based on 30-pole connector type JAE JS-1267-30(G1)NH.

Figure 23: LVDS Connector LVDS1




Table 37: Pin Assignment LVDS1

Pin	Signal	Note
1	LVDS_A0-	
2	LVDS_A0+	
3	LVDS_A1-	
4	LVDS_A1+	
5	LVDS_A2-	
6	LVDS_A2+	
7	GND	

Pin	Signal	Note
8	LVDS_ACLK-	
9	LVDS_ACLK+	
10	LVDS_A3-/NC	
11	LVDS_A3+/NC	
12	LVDS_B0-	
13	LVDS_B0+	
14	GND	
15	LVDS_B1-	
16	LVDS_B1+	
17	GND	
18	LVDS_B2-	
19	LVDS_B2+	
20	LVDS_BCLK-	
21	LVDS_BCLK+	
22	LVDS_B3-/NC	
23	LVDS_B3+/NC	
24	GND	
25	DDC_DATA	
26	VDDEN	
27	DDC_CLK	
28	+3.3V / +5V *	
29	+3.3V / +5V*	
30	+3.3V / +5V*	



* Panel Power can be selected by JP3.

Table 38: Signal Description

Signal	Description
LVDS_A0..A3	LVDS A Channel data
LVDS_ACLK	LVDS A Channel clock
LVDS_B0..B3	LVDS B Channel data
LVDS_BCLK	LVDS B Channel clock
VDDEN	Output Display Enable
DDC_DATA	DDC channel Data
DDC_CLK	DDC Channel Clock

7.11. Backlight Power Output Wafer (CN23)

Figure 24: Backlight Power Output Wafer CN23



Table 39: Pin Assignment CN23

Pin	Signal	Note
1	BL_ADJ_PWM*	
2	BL_ADJ_VOL*	
3	GND	
4	+5V / +12V**	
5	+5V / +12V**	
6	GND	
7	BL_EN***	



* BL_ADJ can be setting in BIOS setup.



** Backlight Power can be selected by JP3.



*** BL_EN can be selected by JP2.

Table 40: Signal Description

Signal	Description
BL_ADJ_PWM	Backlight Adjustment PWM (Pulse Width Modulation) signal
BL_ADJ_VOL	Backlight Adjustment Voltage signal
BL_EN	Backlight Enable signal

7.12. Digital Input / Output Wafer (CN14)

Figure 25: Digital Input / Output Wafer CN14




Table 41: Pin Assignment CN14

Pin	Signal	Note
1	+5V	
2	DIO_0	
3	DIO_1	
4	DIO_2	
5	DIO_3	
6	DIO_4	
7	DIO_5	
8	DIO_6	
9	DIO_7	
10	GND	

7.13. mPCIe Socket (MPCIE1)

Full-sized Mini-PCI Express V1.2 socket (MPCIE1). Socket MPCIE1 supports mPCIe, USB 2.0 and SIM-card socket. The SIM-card socket makes it possible to use a 3G/4G-wireless modem in this mPCIe slot. The USB does support WAKE function.

Figure 26: mPCIe Slot Connector MPCIE1

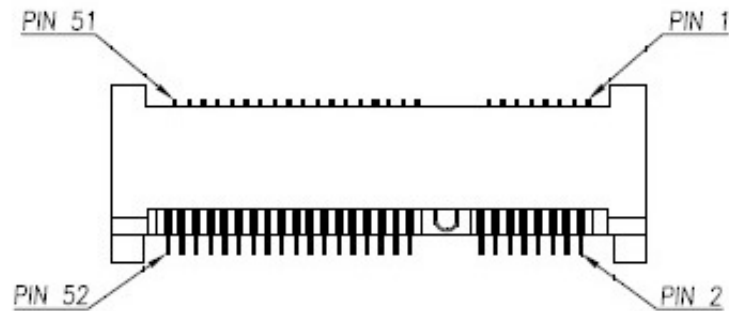


Table 42: Pin Assignment MPCIE1

Pin	Signal	Note
1	WAKE#	
2	+3.3VSB	
3	Reserved	
4	Ground	
5	Reserved	
6	+1.5V	
7	CLKREQ#	
8	UIM_PWR*	
9	Ground	
10	UIM_DATA*	
11	REFCLK-	
12	UIM_CLK*	
13	REFCLK+	
14	UIM_RESET*	
15	Ground	
16	UIM_VPP*	
17	Reserved	
18	Ground	
19	Reserved	
20	W_Disable#	
21	Ground	
22	PERST#	
23	PERn0	
24	+3.3VSB	
25	PERp0	

Pin	Signal	Note
26	Ground	
27	Ground	
28	+1.5V	
29	Ground	
30	SMB_CLK	
31	PETn0	
32	SMB_DATA	
33	PETp0	
34	Ground	
35	Ground	
36	USB_D-	
37	Ground	
38	USB_D+	
39	+3.3VSB	
40	Ground	
41	+3.3VSB	
42	LED_WWAN#	
43	Ground	
44	LED_WLAN#	
45	Reserved	
46	LED_WPAN#	
47	Reserved	
48	+1.5V	
49	Reserved	
50	Ground	
51	Reserved	
52	+3.3VSB	




* These pins are connected to CN7 SIM Interface directly.

7.14. NGFF M.2 Key B Socket (CON1)

The 3.5"-SBC-APL V2.0 supports M.2 modules in format 2242 with Key B. The M.2 specification enables one SATA3.0 (6 Gb/s), one USB 2.0 and SIM-card socket to be exposed through the same slot. The SIM-card socket makes it possible to use a 3G/4G-wireless modem in this M.2 slot. For the model with three USB 2.0 ports support (via optional pin header CN26 for an additional USB 2.0 port), the M.2 Key B does not support USB 2.0 signals.

Figure 27: NGFF M.2 Key B Slot Connector CON1

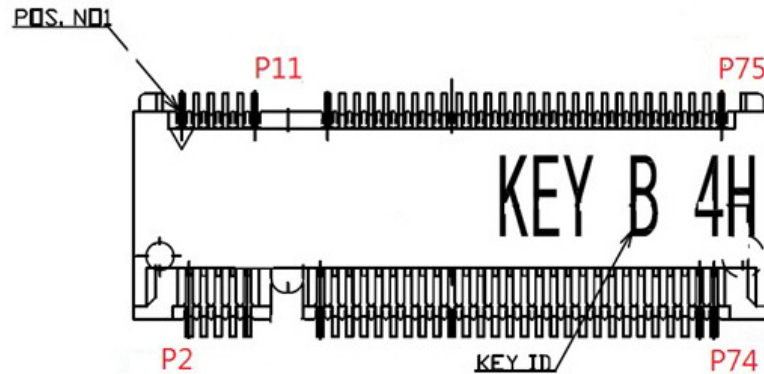

SATA M.2 requires the following BIOS depending on the class code options below.

M.2 SSD	Boot	Storage
SATA M.2 SSD	Supported	Supported

Table 43: Pin Assignment CON1

Pin	Signal	Note
1	CONFIG3	
2	+3.3V	
3	GND	
4	+3.3V	
5	GND	
6	FULL CARD PWR OFF	
7	USB-D+	
8	W DISABLE#1	
9	USB-D-	
10	GPIO9	
11	GND	
12	KEY B	
13	KEY B	
14	KEY B	
15	KEY B	
16	KEY B	
17	KEY B	
18	KEY B	

Pin	Signal	Note
19	KEY B	
20	GPIO5	
21	CONFIO	
22	GPIO6	
23	GPIO11	
24	GPIO7	
25	GPIO12	
26	GPIO10	
27	GND	
28	GPIO8	
29	NC	
30	UIM RESET*	
31	NC	
32	UIM CLK*	
33	GND	
34	UIM DATA*	
35	NC	
36	UIM PWR*	
37	NC	
38	DEVSLP	
39	GND	
40	GPIO0	
41	PETn0/SATAB+	
42	GPIO1	
43	PETp0/SATAB-	
44	GPIO2	
45	GND	
46	GPIO3	
47	PERn0/SATAA-	
48	GPIO4	
49	PERp0/SATAA+	
50	PERST	
51	GND	
52	CLKREQ	
53	REFCLKN	
54	PEWAKE	
55	REFCLKP	
56	MFG_DAT	
57	GND	
58	MFGCLK	
59	ANTCTL	
60	COEX	

Pin	Signal	Note
61	ANTCTL	
62	COEX	
63	ANTCTL	
64	COEX	
65	ANTCTL	
66	SIM DETECT	
67	PER1-	
68	SUSCLK	
69	CONFIG1	
70	+3.3V	
71	GND	
72	+3.3V	
73	GND	
74	+3.3V	
75	CONFIG2	



* These pins are connected to CN7 SIM Interface directly.

7.15. SIM Interface Wafer for MPCIE1 and M.2 Key B (CN7)

Figure 28: SIM Interface Wafer CN7




Table 44: Pin Assignment CN7

Pin	Signal	Description	Note
1	UIM_PWR	Power +5V or +3.3V	
2	UIM_DATA	Input or Output for serial data	
3	UIM_RESET	Reset signal	
4	UIM_VPP	Programming voltage input (optional)	
5	UIM_CLK	Clock signal	
6	GND	Ground	



SIM Interface can be selected by JP1.

7.16. Micro-SD Card Cage (CN3)

Figure 29: Micro-SD Card Cage CN3

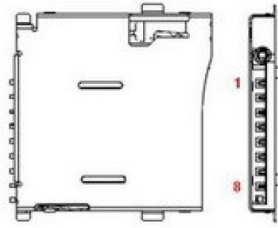



Table 45: Pin Assignment CN3

Pin	Signal	Note
1	DAT2	
2	CD/DAT3	
3	CMD	
4	VDD	
5	CLK	
6	GND	
7	DAT0	
8	DAT1	

7.17. Switches and Jumpers

The product has several jumpers which must be properly configured to ensure correct operation.

Figure 30: Jumper Connector

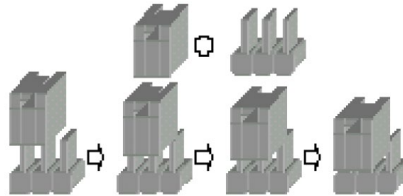

For a three-pin jumper (see Figure 35), the jumper setting is designated "1-2" when the jumper connects pins 1 and 2. The jumper setting is designated "2-3" when pins 2 and 3 are connected and so on. You will see that one of the lines surrounding a jumper pin is thick, which indicates pin No.1.

To move a jumper from one position to another, use needle-nose pliers or tweezers to pull the pin cap off the pins and move it to the desired position.

7.17.1. SIM Card Selection (JP1)

The "SIM Card Selection" jumper (JP1) can be used to select an expansion interface to connect to the SIM interface.

The jumper has one position: Pin 1-2. More information on setting the "SIM Card Selection" jumper can be found in the following table.

Figure 31: SIM Card Selection (JP1)




Table 46: Pin Assignment JP1

Jumper Position	Description
Pin 1-2	
X	MPCI E (default)
-	M.2 Key B

"X" = Jumper set (short) and "-" = jumper not set (open)

7.17.2. Backlight Enable Selection (JP2)

Figure 32: Backlight Enable Selection JP2

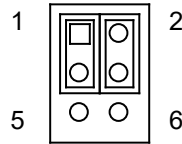


Table 47: Pin Assignment JP2

Jumper 1 Position		Description
Pin 1-3	Pin 3-5	
X	-	Backlight Enable Voltage = +3.3V
-	X	Backlight Enable Voltage = +5V
Jumper 2 Position		Description
Pin 2-4	Pin 4-6	
X	-	Active High
-	X	Active Low

"X" = Jumper set (short) and "-" = jumper not set (open)

7.17.3. Panel & Backlight Power Selection (JP3)

Figure 33: Panel & Backlight Power Selection JP3

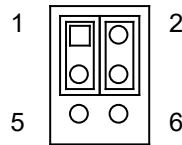


Table 48: Pin Assignment JP3

Jumper 1 Position		Description
Pin 1-3	Pin 3-5	
X	-	Backlight Power = +12V
-	X	Backlight Power = +5V
Jumper 2 Position		Description
Pin 2-4	Pin 4-6	
X	-	Panel Power = +3,3V
-	X	Panel Power = +5V

"X" = Jumper set (short) and "-" = jumper not set (open)

7.17.4. AT / ATX Power Mode Selection (JP4)

Figure 34: AT / ATX Power Mode Selection JP4




Table 49: Pin Assignment JP4

Jumper 1 Position		Description
Pin 1-2	Pin 2-3	
X	-	ATX Mode
-	X	AT Mode

"X" = Jumper set (short) and "-" = jumper not set (open)



While switching to AT mode, jumper setting in BIOS menu must be settled as "Restore power = Off" (see Section 9.2.3).

7.17.5. M.2 Key B Activity LED Pin Header (JP5)

Figure 35: M.2 Key B Activity LED Pin Header JP5




Table 50: Pin Assignment JP5

Pin	Signal	Note
1	LED+	
2	LED-	

7.17.6. MPCIE Activity LED Pin Header (JP6)

Figure 36: MPCIE1 Activity LED Indication JP6




Table 51: Pin Assignment JP6

Pin	Signal	Note
1	LED+	
2	LED-	

7.17.7. RTC Reset Selection (JP8)

The "RTC Reset" jumper (JP8) can be used to reset the Real Time Clock (RTC) and drain RTC well.

The jumper has one position: Pin 1-2 and not mounted (default position). More information on setting the "RTC Reset" jumper can be found in the following table.

Figure 37: RTC Reset Selection JP8




Table 52: Pin Assignment JP8

Jumper Position	Description
Pin 1-2	
X	Enable Clear CMOS RTC content (board does not boot with the jumper in this position)
-	Normal operation (default position)

"X" = Jumper set (short) and "-" = jumper not set (open)



Do not leave the jumper in position 1-2, otherwise if the power is disconnected, the battery will fully deplete within a few weeks.

7.17.8. USB Power Selection (JP9)

Figure 38: USB Power Selection JP9




Table 53: Pin Assignment JP9

Jumper Position	Description
Pin 1-2	
X	USB power is always supply.
-	USB power will be cut off in S4 & S5 state.

"X" = Jumper set (short) and "-" = jumper not set (open)

7.17.9. ME F/W Selection (JP10)

Figure 39: ME F/W Selection JP10




Table 54: Pin Assignment JP10

Jumper Position	Description
Pin 1-2	
X	ME F/W Disabled
-	Normal Operation

"X" = Jumper set (short) and "-" = jumper not set (open)

7.17.10. EEPROM Write Protect Selection (JP12)

Figure 40: EEPROM Write Protect Selection JP12




Table 55: Pin Assignment JP12

Jumper Position	Description
Pin 1-2	
X	Write Protect Disabled
-	Controlled by SIO GP47

"X" = Jumper set (short) and "-" = jumper not set (open)

8/ On-Board Connectors & Mating Connector Types

The Mating connectors / Cables are connectors or cable kits which are fitting the On-board connector.

The cable kits marked with "*" are included in the "3.5"-SBC-APL V2.0 Cable & Driver Kit".

Table 56: On-Board Connectors & Mating Connector Types

Connector	On-Board Connectors		Mating Connectors / Cables	
	Manufact.	Type No.	Manufact.	Type No.
Battery Input (BAT1)	Pinrex	712-73-02TWR0		
DC 12V Power Input (CN1)	Pinrex	733-97-04TBR1		0C5020000001580L
HDD Power Output (CN2)	Pinrex	721-93-04TWE9		0C5020000001590L
Micro-SD Card Cage (CN3)	HOMETOM	SD08F36BDA005		
USB 2.0 (CN6)	YIMTEX	3362*05SANGR-09		0C502USB0201010L
SIM (CN7)	Pinrex	712-73-06TWB0		0ZHK12003GSIM003
Audio Input/Output (CN11)	Pinrex	212-92-06GBE1		0C5020000002050L
Audio AMP (CN12, CN16)	YIMTEX	503PW1*02STR & 503PW1*02ST-1R		
DIO (CN14)	Pinrex	712-73-10TWB0		0C5020000002060L
COM (CN17 ~ CN22)	Pinrex	712-73-10TWB0		0C5020000000910L
Backlight Power (CN23)	YIMTEX	501MW1X07MTR-1R		
LVDS Panel (LVDS1)	JAE	JS-1267-30(G1)NH		
FAN (FAN1)	Pinrex	712-73-03TWE0		
Front Panel (FP1)	YIMTEX	3362*04SANGR		
Front Panel (FP2)	YIMTEX	3362*05SANGR		
mPCIe (MPCIE1)	FOXCONN	A50B221-556Q-7H		
M.2 Key B (CON1)	YANNIS	M2501-2B1R		
SATA (SATA1)	WIN WIN	WATM-07ABN4A2B8UW4		0C5020000004240L
USB 2.0 (CN26)	Pinrex	712-73-04TWE0		0C5020000003220L



Please note that standard connectors like DP, mPCIe, Audio Jack, Ethernet and USB are not included in the list.

9/ BIOS

9.1. Starting the uEFI BIOS

The 3.5"-SBC-APL V2.0 is provided with a Kontron-customized, pre-installed and configured version of AMI Aptio® V uEFI BIOS. AMI BIOS firmware is based on the Unified Extensible Firmware Interface (UEFI) specification and the Intel® Platform Innovation Framework for EFI. This uEFI BIOS provides a variety of new and enhanced functions specifically tailored to the hardware features of the 3.5"-SBC-APL V2.0.

The uEFI BIOS comes with a setup program that provides quick and easy access to the individual function settings for control or modification of the uEFI BIOS configuration. The setup program allows the accessing of various menus that provide functions or access to sub-menus with more specific functions of their own.

To start the uEFI BIOS setup program, follow the steps below:

1. Power on the board.
2. Wait until the first characters appear on the screen (POST messages or splash screen).
3. Press the key.
4. If the uEFI BIOS is password-protected, a request for password will appear. Enter either the User Password or the Supervisor Password (see Security menu), press <RETURN>, and proceed with step 5.
5. A setup menu will appear.

The 3.5"-SBC-APL V2.0 uEFI BIOS setup program uses a hot key-based navigation system. A hot key legend bar is located on the bottom of the setup screens.

The following table provides information concerning the usage of these hot keys.

Table 57: Font Size Table

Hotkeys	Description
<F1>	The <F1> key invokes the General Help window.
<->	The <Minus> key selects the next lower value within a field.
<+>	The <Plus> key selects the next higher value within a field.
<F2>	The <F2> key loads the previous values.
<F3>	The <F3> key loads the standard default values.
<F4>	The <F4> key saves the current settings and exit the uEFI BIOS setup.
<=> or <<=>	The <Left/Right> arrows selects major setup menus on the menu bar. For example: Main, Advanced, Security, etc.
<↑> or <↓>	The <Up/Down> arrows selects fields in the current menu. For example: A setup function or a sub-screen.
<ESC>	The <ESC> key exits a major setup menu and enter the Exit setup menu. Pressing the <ESC> key in a sub-menu displays the next higher menu level.
<RERURN>	The <RETURN> key executes a command or select a submenu.

9.2. Setup Menus

The Setup utility features shows six menus in the selection bar at the top of the screen:

- ▶ Main
- ▶ Advanced
- ▶ Power
- ▶ Boot
- ▶ Security
- ▶ Save & Exit

The Setup menus are selected via the left and right arrow keys. The currently active menu and the currently active uEFI BIOS Setup item are highlighted in white. Each Setup menu provides two main frames. The left frame displays all available functions. Functions that can be configured are displayed in blue. Functions displayed in gray provide information about the status or the operational configuration. The right frame displays an Item Specific Help window providing an explanation of the respective function.

9.2.1. Main Setup Menu

Upon entering the uEFI BIOS Setup program, the Main Setup menu is displayed. This screen lists the Main Setup menu sub-screens and provides basic system information. Additionally functions for setting the system time and date are offered.

Table 58: Main Setup Menu Sub-Screens and Functions

Function	Description
BIOS Information	Read only field. Displays information about the system BIOS
Memory Information	Read only field. Displays information about total memory
ME Information	Read only field. Displays information about Intel Management Engine (ME) version
TXE Information	Read only field. Displays information about TXE information
Firmware Information	Code version and firmware information
System Date	Set System Date
System Time	Set System Time

Figure 41: BIOS Main Menu Screen System Data and Time

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Product Information					
Product Name		3.5"-SBC-APL V2.0-N4200			
BIOS Version		R0.07 (x64)			
BIOS Build Date		04/10/2017			
ME FW Version		3.0.13.1144			
CPU Information					
Intel® Pentium® CPU N4200 @ 1.10GHz					
Microcode Revision		28			
Processor Cores		4			
Memory Information					
Total Size		8192 MB (DDR3L)			
Frequency		1600 MHz			
System Date		[Web 05/17/2017]			
System Time		[10:22:49]			
Access Level		Administrator			
→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit					
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
System Date	[dd/mm/yyyy]	Set the Date. Use Tab to switch between Data elements.
System Time	[hh:mm:ss]	Set the Time. Use Tab to switch between Time elements.

9.2.2. Advanced Setup Menu

The Advanced setup menu provides sub-screens and functions for advanced configurations. The following sub-screen functions are included in the menu:

- ▶ LAN, Audio & M.2 Device Type Configuration
- ▶ Display Configuration
- ▶ Super IO Configuration
- ▶ CPU Chipset Configuration
- ▶ SATA Configuration
- ▶ USB Configuration
- ▶ DIO Configuration
- ▶ Network Stack
- ▶ H/W Monitor

NOTICE

Setting items on this screen to incorrect values may cause the system to malfunction.

Figure 42: BIOS Advanced Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Onboard LAN1 Controller		[Enabled]			
Onboard LAN2 Controller		[Enabled]			
Audio Controller		[Enabled]			
> Display Configuration				→ ←: Select Screen	
> Super IO Configuration				↑ ↓: Select Item	
> CPU Chipset Configuration				Enter: Select	
> SATA Configuration				+/-: Change Opt.	
> USB Configuration				F1: General Help	
> DIO Configuration				F2: Previous Values	
> Network Stack				F3: Optimized Defaults	
> H/W Monitor				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Onboard LAN1 Controller	[Disabled], [Enabled]	Select whether to enable or disable Onboard LAN1 Controller.
Onboard LAN2 Controller	[Disabled], [Enabled]	Select whether to enable or disable Onboard LAN2 Controller.
Audio Controller	[Disabled], [Enabled]	Select whether to enable or disable Audio Controller.

Figure 43: BIOS Advanced Menu - Display Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Display Configuration					
Primary Display		[IGD]		→ ←: Select Screen	
UWA Frame Buffer Size		[256MB]		↑ ↓: Select Item	
DVMT Pre-Allocated		[64M]		Enter: Select	
DVMT Total Gfx Mem		[256M]		+/-: Change Opt.	
Active LVDS		[Disabled]		F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Primary Display	[IGD], [PCIe]	Select which graphic controller to be used as the primary display device.
UWA Frame Buffer Size	[128MB], [256MB], [512MB]	Select the Aperture Size.
DVMT Pre-Allocated	[64M], [96M], [128M], [160M], [192M], [224M], [256M], [288M], [320M], [352M], [384M], [416M], [448M], [480M], [512M]	Select DVMT Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.
DVMT Total Gfx Mem	[128M], [256M], [MAX]	Select DVMT Total Graphic Memory size used by the Internal Graphics Device.
Active LVDS	[Disabled], [Enabled]	Select the Active LVDS Configuration. [Disabled]: VBIOS does not enable LVDS. [Enabled]: VBIOS will enable LVDS.

Figure 44: BIOS Advanced Menu - Super IO Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Super IO Configuration					
> Serial Port 1 Configuration > Serial Port 2 Configuration > Serial Port 3 Configuration > Serial Port 4 Configuration > Serial Port 5 Configuration > Serial Port 6 Configuration				→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Figure 45: BIOS Advanced Menu - Super IO Configuration - Serial Port 1 Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Serial Port 1 Configuration					
Serial Port		[Enabled]		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Device Settings		IO=3F8h; IRQ=4;			
Change Setting		[Auto]			
Serial Port 1 Type		[RS232]			
RS485 Deplx Mode*		[Half Duplex]			
RS485 Auto Flow Control		[Disabled]			
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

* These items appear only when selecting RS485 for the Serial Port 1 Type.

Feature	Option	Description
Serial Port	[Disabled], [Enabled]	Select whether to enable or disable Serial Port (COM).
Change Settings	[Auto], [IO=3F8h; IRQ=4;], [IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;]	Select an optional setting for Super IO device.

Feature	Option	Description
Serial Port 1 Type	[RS232], [RS422], [RS485]	Select an appropriate type for Serial Port 1.
RS485 Duplex Mode	[Half Duplex], [Full Duplex]	Select an appropriate RS485 Duplex Mode.
RS485 Auto Flow Control	[Disabled], [Enabled]	Select whether to enable or disable RS485 Auto Flow Control.

Figure 46: BIOS Advanced Menu - Super IO Configuration - Serial Port 2 Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Serial Port 2 Configuration					
Serial Port		[Enabled]		→ ←: Select Screen	
Device Settings		IO=2F8h; IRQ=10;		↑ ↓: Select Item	
Change Setting		[Auto]		Enter: Select	
Serial Port 2 Type		[RS232]		+/-: Change Opt.	
RS485 Deplx Mode*		[Half Duplex]		F1: General Help	
RS485 Auto Flow Control		[Disabled]		F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

* These items appear only when selecting RS485 for the Serial Port 2 Type.

Feature	Option	Description
Serial Port	[Disabled], [Enabled]	Select whether to enable or disable Serial Port (COM).
Change Settings	[Auto], [IO=2F8h; IRQ=10;], [IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;]	Select an optional setting for Super IO device.
Serial Port 2 Type	[RS232], [RS422], [RS485]	Select an appropriate type for Serial Port 2.
RS485 Duplex Mode	[Half Duplex], [Full Duplex]	Select an appropriate RS485 Duplex Mode.
RS485 Auto Flow Control	[Disabled], [Enabled]	Select whether to enable or disable RS485 Auto Flow Control.

Figure 47: BIOS Advanced Menu - Super IO Configuration - Serial Port 3 Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Serial Port 3 Configuration					
Serial Port		[Enabled]		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Device Settings		IO=3E8h; IRQ=7;			
Change Setting		[Auto]			
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Serial Port	[Disabled], [Enabled]	Select whether to enable or disable Serial Port (COM).
Change Settings	[Auto], [IO=3E8h; IRQ=7;], [IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2F0h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2E0h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;]	Select an optional setting for Super IO device.

Figure 48: BIOS Advanced Menu - Super IO Configuration - Serial Port 4 Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Serial Port 4 Configuration					
Serial Port		[Enabled]		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Device Settings		IO=2E8h; IRQ=7;			
Change Setting		[Auto]			
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Serial Port	[Disabled], [Enabled]	Select whether to enable or disable Serial Port (COM).
Change Settings	[Auto], [IO=2E8h; IRQ=7;], [IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2F0h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2E0h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;]	Select an optional setting for Super IO device.

Figure 49: BIOS Advanced Menu - Super IO Configuration - Serial Port 5 Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Serial Port 5 Configuration					
Serial Port		[Enabled]		→ ←: Select Screen	
Device Settings		IO=2F0h; IRQ=7;		↑ ↓: Select Item	
Change Setting		[Auto]		Enter: Select	
				+/-: Change Opt.	
				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Serial Port	[Disabled], [Enabled]	Select whether to enable or disable Serial Port (COM).
Change Settings	[Auto], [IO=2F0h; IRQ=7;], [IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2F0h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2E0h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;]	Select an optional setting for Super IO device.

Figure 50: BIOS Advanced Menu - Super IO Configuration - Serial Port 6 Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Serial Port 6 Configuration					
Serial Port		[Enabled]		→ ←: Select Screen	
Device Settings		IO=2E0h; IRQ=7;		↑ ↓: Select Item	
Change Setting		[Auto]		Enter: Select	
				+/-: Change Opt.	
				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Serial Port	[Disabled], [Enabled]	Select whether to enable or disable Serial Port (COM).
Change Settings	[Auto], [IO=2E0h; IRQ=7;], [IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2F0h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;], [IO=2E0h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;]	Select an optional setting for Super IO device.

Figure 51: BIOS Advanced Menu - CPU Chipset Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
CPU Chipset Configuration					
EIST		[Enabled]		→ ←: Select Screen	
Turbo Mode		[Enabled]		↑ ↓: Select Item	
Active Processor Cores		[Disabled]		Enter: Select	
Intel Virtualization Technology		[Enabled]		+/-: Change Opt.	
VT-d		[Disabled]		F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
EIST	[Disabled], [Enabled]	Select whether to enable or disable Enhanced Intel SpeedStep Technology.
Turbo Mode	[Disabled], [Enabled]	Select whether to enable or disable turbo mode.
Active Processor Cores	[Disabled], [Enabled]	Select whether to enable or disable active processor cores.
Intel Virtualization Technology	[Disabled], [Enabled]	Select whether to enable or disable Intel Virtualization Technology.
VT-d	[Disabled], [Enabled]	Select whether to enable or disable VT-d capability.

Figure 52: BIOS Advanced Menu - SATA Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
SATA Configuration					
SATA Controller		[Enabled]	→ ←: Select Screen		
SATA Mode Selection		[AHCI]	↑ ↓: Select Item		
Serial ATA Port 1		[Not Installed]	Enter: Select		
Port 1		[Enabled]	+/-: Change Opt.		
mS ATA Port 1		[Not installed]	F1: General Help		
Port 1		[Enabled]	F2: Previous Values		
			F3: Optimized Defaults		
			F4: Save & Exit		
			ESC: Exit		
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
SATA Controller	[Enabled], [Disabled]	Select whether to enable or disable SATA Controller(s).
SATA Mode Selection	[AHCI]	Determine how SATA controller(s) operate.
Port 1	[Disabled], [Enabled]	Select whether to enable or disable SATA Port 1 or mSATA Port 1.

Figure 53: BIOS Advanced Menu - USB Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
USB Configuration					
USB Devices: 1 Keyboard				→ ←: Select Screen ↑ ↓: Select Item Enter: Select	
Legacy USB Support		[Enabled]		+/-: Change Opt.	
XHCI Hand-off		[Enabled]		F1: General Help	
USB Mass Storage Driver Support		[Enabled]		F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Legacy USB Support	[Enabled], [Disabled], [Auto]	Select whether to enable or disable Legacy USB support. AUTO option disables legacy support if no USB devices are connected.
XHCI Hand-off	[Enabled], [Disabled]	Select whether to enable or disable XHCI Hand-off function. This is a workaround for OSeS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
USB Mass Storage Driver Support	[Disabled], [Enabled]	Select whether to enable or disable USB Mass Storage Driver Support.

Figure 54: BIOS Advanced Menu - DIO Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
DIO Configuration					
User Configuration		[Disabled]			
DIO_0*		[Output Low]			
DIO_1*		[Output Low]			
DIO_2*		[Output Low]			
DIO_3*		[Output Low]			
DIO_4*		[Output Low]			
DIO_5*		[Output Low]			
DIO_6*		[Output Low]			
DIO_7*		[Output Low]			
DIO_0 Value		1		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
DIO_1 Value		1			
DIO_2 Value		1			
DIO_3 Value		1			
DIO_4 Value		1			
DIO_5 Value		1			
DIO_6 Value		1			
DIO_7 Value		1			
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

* These items appear only when enabling User Configuration.

Feature	Option	Description
User Configuration	[Enabled], [Disabled]	Select whether or not to allow user to set the DO pin output value.
DIO_0..7	[Output Low], [Output High], [Input]	Set up the DIO pin input / output value.

Figure 55: BIOS Advanced Menu - Network Stack

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Network Stack		[Disabled]			
Ipv4 PXE Support*		[Disabled]			
Ipv6 PXE Support*		[Disabled]			
				→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

* These items appear only when enabling Network Stack.

Feature	Option	Description
Network Stack	[Enabled], [Disabled]	Select whether to enable or disable UEFI network stack.
Ipv4 PXE Support	[Enabled], [Disabled]	Select whether to enable or disable Ipv4 PXE Boot Support.
Ipv6 PXE Support	[Enabled], [Disabled]	Select whether to enable or disable Ipv6 PXE Boot Support.

Figure 56: BIOS Advanced Menu - H/W Monitor

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
PC Health Status					
> Smart FAN Configuration					
CPU Temperature		: +39 C			
System Temperature		: +39 C			
CPU Fan Speed		: N/A		→ ←: Select Screen	
+VCORE		: +0.773 V		↑ ↓: Select Item	
+12V		: +18.924 V		Enter: Select	
+5V		: +5.066 V		+/-: Change Opt.	
+VMEM		: +1.349 V		F1: General Help	
+3.3V		: +3.312 V		F2: Previous Values	
+VRTC		: +3.120 V		F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Smart FAN Configuration					
CPU FAN Setting		[Manual]		→ ←: Select Screen	
Manual Duty		255		↑ ↓: Select Item	
				Enter: Select	
				+/-: Change Opt.	
				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
CPU FAN Setting	[Manual], [Smart]	Switch the CPU FAN control mode.

9.2.3. Power Setup Menu

The Power setup menu provides functions and a sub-screen for power configurations. The following sub-screen function is included in the menu:

- ▶ WatchDog Timer Configuration

Figure 57: BIOS Power Setup Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Power Configuration					
ACPI Sleep State		[S3 (Suspend to RAM)]			
Restore AC Power Loss		[Power Off]			
Power Saving Mode		[EUP Enabled]			
Resume Event Control				→ ←: Select Screen	
Resume By LAN 1 Device				↑ ↓: Select Item	
Resume By LAN 2 Device		[Disabled]		Enter: Select	
Resume By MPCIE1 Device		[Disabled]		+/-: Change Opt.	
Resume By M2 Device		[Disabled]		F1: General Help	
Resume By Ring Device		[Disabled]		F2: Previous Values	
Resume By RTC Alarm		[Disabled]		F3: Optimized Defaults	
> WatchDog Timer Configuration				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
ACPI Sleep State	[S3 (Suspend to RAM)]	Select whether to enable or disable suspend function and determine an appropriate suspend mode.
Restore AC Power Loss	[Power Off], [Power On], [Last State]	Control whether the system will stay on after AC power is removed and then restored. Select [Power Off] if you want the system to remain off after power restored. Select [Power On] if you use a power strip to turn the system on.
Power Saving Mode	[Disabled], [EUP Enabled]	Select whether to enable Power Saving Mode.
Resume By LAN 1 Device	[Disabled], [Enabled]	Select whether to enable or disable Wake from LAN 1 Device.
Resume By LAN 2 Device	[Disabled], [Enabled]	Select whether to enable or disable Wake from LAN 2 Device.
Resume By MPCIE1 Device	[Disabled], [Enabled]	Select whether to enable or disable Wake from MPCIE1 Device.
Resume By M2 Device	[Disabled], [Enabled]	Select whether to enable or disable Wake from M2 Device.
Resume By Ring Device	[Disabled], [Enabled]	Select whether to enable or disable Wake from Ring Device.
Resume By RTC Alarm	[Disabled], [Enabled]	Select whether to enable or disable Wake Up on Alarm, to turn on your system on a special day of the month.

Figure 58: BIOS Power Setup Menu - WatchDog Timer Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
WatchDog Timer Configuration					
WDT Function		[Disabled]		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
WDT Function	[Disabled], [Enabled]	Select whether to enable or disable WatchDog Timer function.

9.2.4. Boot Setup Menu

The boot setup menu lists the for boot device priority order, that is generated dynamically.

Figure 59: BIOS Boot Setup Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Boot Configuration					
Full Screen LOGO Display		[Disabled]			
Setup Prompt Timeout		1		→ ←: Select Screen	
Bootup NumLock State		[On]		↑ ↓: Select Item	
CSM Support		[Disabled]		Enter: Select	
Boot Option Filter		[UEFI only]		+/-: Change Opt.	
Boot Option Priorities				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Option	Description
Full Screen LOGO Display	[Disabled], [Enabled]	Select whether to enable or disable to display logo screen.
Bootup NumLock State	[On], [Off]	Select the state of the NumLock feature of the keyboard after Startup. [On]: The keys on the keypad will act as numeric keys. [Off]: The keys on the keypad will act as cursor keys.
CSM Support	[Disabled]	Read only field.
Boot Option Filter	[UEFI only]	Read only field

9.2.5. Security Setup Menu

The Security setup menu provides information about the passwords and functions for specifying the security settings. The passwords are case-sensitive. The 3.5"-SBC-APL V2.0 provides no factory-set passwords.

NOTICE

If there is already a password installed, the system asks for this first. To clear a password, simply enter nothing and acknowledge by pressing <RETURN>. To set a password, enter it twice and acknowledge by pressing <RETURN>.

Figure 60: BIOS Boot Setup Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Password Description If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights The password length must be in the following range:					
Minimum Length		3		→ ←: Select Screen	
Maximum length		20		↑ ↓: Select Item	
Administrator Password				Enter: Select	
User Password				+/-: Change Opt.	
> Secure Boot				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Description
Administrator Password	Set administrator password
User Password	Set user password



If only the administrator's password is set, then only access to setup is limited. The password is only entered when entering setup.

If only the user's password is set, then the password is a power on password and must be entered to boot or enter setup. Within the setup menu the user has administrator rights.

Password length requirements are maximum 20 characters and minimum 3 characters.

9.2.5.1. Remember the password

It is highly recommended to keep a record of all passwords in a safe place. Forgotten passwords results in being locked out of the system.

If the system cannot be booted because the User Password or the Supervisor Password are not know, contact Kontron Support for further assistance.



HDD security passwords cannot be cleared using the above method.

9.2.6. Save & Exit Setup Menu

The exit setup menu provides functions for handling changes made to the UEFI BIOS settings and the exiting of the setup program.

Figure 61: BIOS Boot Setup Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Save Changes and Reset					
Discard Changes and Reset					
Save Options				→ ←: Select Screen	
Save Changes				↑ ↓: Select Item	
Discard Changes				Enter: Select	
Restore Defaults				+/-: Change Opt.	
				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Feature	Description
Save Changes and Exit	Exit system setup after saving the changes. Once you are finished making your selections, choose this option from the Exit menu to ensure the values you selected are saved to the CMOS RAM. The CMOS RAM is sustained by an onboard backup battery and stays on even when the PC is turned off. When you select this option, a confirmation window appears. Select [Yes] to save changes and exit.
Discard Changes and Exit	Exit system setup without saving any changes. Select this option only if you do not want to save the changes that you made to the Setup program. If you made changes to fields other than system date, system time, and password, the BIOS asks for a confirmation before exiting.
Save Changes	Save changes done so far to any of the setup values. This option allows you to save the selections you made. After selecting this option, a confirmation appears. Select [Yes] to save any changes.
Discard Changes	Discards changes done so far to any of the setup values. This option allows you to discard the selections you made and restore the previously saved values. After selecting this option, a confirmation appears. Select [Yes] to discard any changes and load the previously saved values.
Restore Defaults	Restore Default values for all the setup values. This option allows you to load optimal default values for each of the parameters on the Setup menus, which will provide the best performance settings for your system. The F9 key can be used for this operation.

Appendix A: List of Acronyms



The following table does not contain the complete acronyms used in signal names, signal type definitions or similar. A description of the signals is included in the I/O Connector and Internal connector chapters within this user guide.

Table 59: List of Acronyms

2D	Two-Dimensional
3D	Three-Dimensional
AT	Advanced Technology
ATX	Advanced Technology eXtended
BGA	Ball Grid Array
BIOS	Basic Input / Output System
BSP	Board Support Package
CMOS	Complementary Metal Oxide Semiconductor
CPU	Central Processing Unit
DC	Direct Current
DDC	Display Data Channel
DIO	Digital Input / Output
DP	DisplayPort
ECC	Error-Correcting Code
EEE	Electrical and Electronic Equipment
EOS	Electrical OverStress
ESD	ElectroStatic Discharge
GbE	Gigabit Ethernet
HDD	Hard Disk Drive
HDMI	High Definition Multimedia Interface
LAN	Local Area Network
LED	Light Emitting Device
LVDS	Low-Voltage Differential Signaling
ME F/W	Management Engine Firmware
mPCIe	mini Peripheral Component Interconnect express
NGFF	Next Generation Form Factor
PC-AT	Personal Computer - Advanced Technology
PCB	Printed Circuit Board
PSU	Power Supply Unit

PVC	PolyViny Chloride
PWM	Pulse Width Modulation
RAM	Random Access Memory
ROM	Read-Only Memory
RTC	Real-Time Clock
SATA	Serial Advanced Technology Attachment
SD	Secure Digital memory card
SDP	Serial Download Protocol
SELV	Safety Extra-Low Voltage
SIM	Subscriber Identity Module
SMBus	System Management Bus
SoC	System on Chip
SO-DIMM	Small Outline Dual In-line Memory Module
SPD	Serial Presence Detect
SPI	Serial Peripheral Interface
TDP	Thermal Design Power
TPM	Trusted Platform Module
UEFI	Unified Extensible Firmware Interface
USB	Universal Serial Bus
UTP	Update Transfer Protocol
VGA	Video Graphics Array
WDT	WatchDog Timer
WEEE	Waste Electrical and Electronic Equipment



About Kontron

Kontron is a global leader in IoT / Embedded Computing Technology (ECT) and offers individual solutions in the areas of Internet of Things (IoT) and Industry 4.0 through a combined portfolio of hardware, software and services. With its standard and customized products based on highly reliable state-of-the-art technologies, Kontron provides secure and innovative applications for a wide variety of industries. As a result, customers benefit from accelerated time-to-market, lower total cost of ownership, extended product lifecycles and the best fully integrated applications.

For more information, please visit: www.kontron.com



Global Headquarters

Kontron Europe GmbH

Gutenbergstraße 2
85737 Ismaning
Germany
Tel.: +49 821 4086-0
Fax: +49 821 4086-111
info@kontron.com